

nobelTek

For home. For efficiency.

MANUAL DE INSTRUȚIUNI PRĂJITOR DE PÂINE



Model: NBT265W

Citiți cu atenție acest manual înainte de utilizare și păstrați-l pentru consultări viitoare.

INSTRUCȚIUNI SIGURANȚĂ

1. Citiți cu atenție toate instrucțiunile înainte de utilizare.
2. Asigurați-vă că tensiunea prizei corespunde cu cea indicată pe eticheta aparatului.
3. Nu atingeți suprafețele fierbinți – folosiți doar mânerele sau butoanele.
4. Pentru a evita riscul de electrocutare, nu introduceți cablul, ștecherul sau nicio parte a prăjitorului în apă sau alte lichide.
5. Supravegherea atentă este necesară atunci când aparatul este utilizat de sau în preajma copiilor.
6. Scoateți aparatul din priză când nu este utilizat și înainte de curățare.
7. Nu folosiți aparatul dacă are cablul sau ștecherul deteriorat sau prezintă funcționare anormală. În caz de deteriorare a cablului, acesta trebuie înlocuit doar de producător, un centru de service autorizat sau personal calificat.
8. Nu lăsați cablul să atârne de marginea mesei/blatului sau să atingă suprafețe fierbinți.
9. Nu amplasați aparatul pe sau lângă surse de căldură, cum ar fi aragazul sau cuptorul.
10. Nu utilizați aparatul în alte scopuri decât cele prevăzute de producător.
11. Nu introduceți în prăjitor alimente de dimensiuni exagerate, ambalaje din folie metalică sau ustensile – pot provoca incendiu sau electrocutare.
12. Prăjirea pâinii poate produce ardere – nu utilizați aparatul în apropierea perdelelor sau altor materiale inflamabile și supavegheați constant procesul.
13. Utilizarea accesoriilor neaprobate de producător poate duce la accidente.
14. Nu încercați să scoateți alimentele blocate în timpul funcționării.
15. Scoateți feliile de pâine cu atenție după prăjire pentru a evita arsurile.
16. Acest aparat este prevăzut cu priză cu împământare – asigurați-vă că priza este corespunzător legată la pământ.
17. Aparatul nu este destinat utilizării cu temporizatoare externe sau sisteme de control la distanță.
18. Acest aparat poate fi folosit de copii peste 8 ani și de persoane cu

capacități fizice, senzoriale sau mentale reduse doar sub supraveghere și cu instrucțiuni clare privind utilizarea în siguranță.

19. Păstrați aparatul și cablul de alimentare departe de copiii sub 8 ani.

20. Atenție: La prăjirea feliilor mici de pâine (<85mm), există risc de arsuri la extragere.


21. Nu utilizați aparatul în exterior.

22. Acest aparat este destinat uzului casnic și în medii similare, precum:

- birouri, magazine;
- gospodării agricole;
- hoteluri, pensiuni;
- spații de tip bed & breakfast.

23. Păstrați aceste instrucțiuni pentru consultări viitoare.

INSTRUCȚIUNI DE UTILIZARE

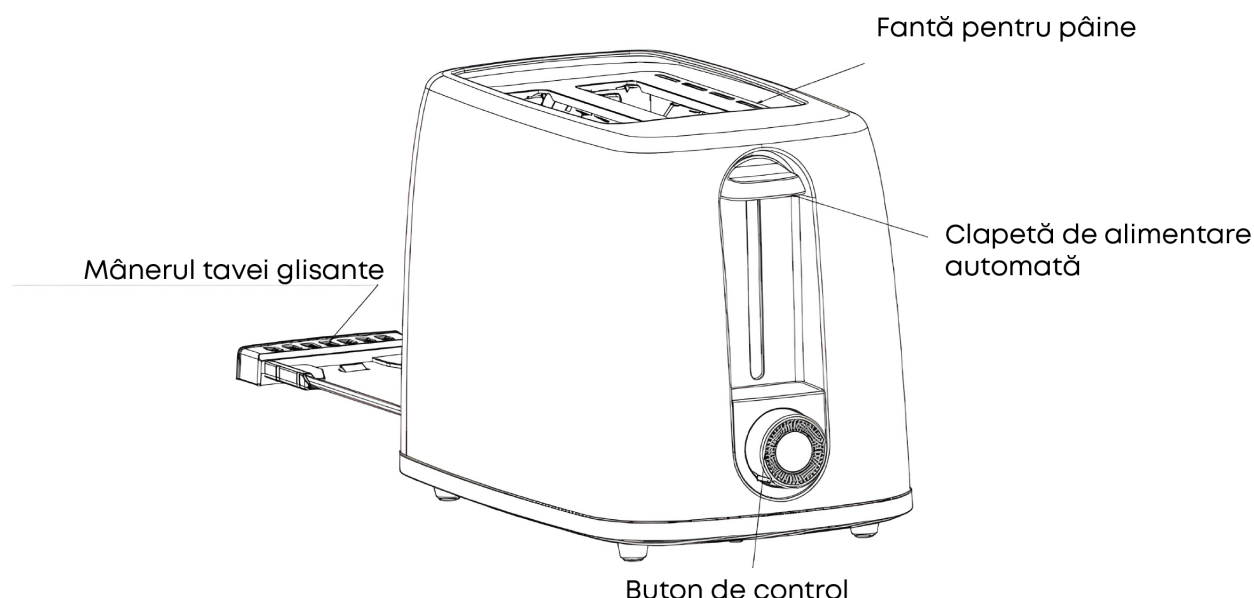

PRIMA UTILIZARE

La prima utilizare, este posibil ca aparatul să degaje un miros specific cauzat de reziduurile de fabricație sau uleiurile de protecție de pe elementele de încălzire. Acest fenomen este normal și dispare după câteva utilizări. Înainte de a prăji prima felie de pâine, se recomandă să efectuați un ciclu complet de funcționare fără pâine, urmând pașii de mai jos:

FUNCȚIONARE

1. Introduceți felia de pâine în fanta prăjitorului. Se pot introduce maximum două felii simultan. Utilizați doar pâine feliată standard.

Notă: Asigurați-vă că tava de firimituri este poziționată corect înainte de utilizare.

2. Conectați aparatul la priză.

3. Setați nivelul de rumenire dorit cu ajutorul selectorului. Sunt disponibile 6 trepte: de la cea mai deschisă (1) până la cea mai închisă (6). Pentru o rumenire aurie, se recomandă poziția 3.

Notă: 1) Rumeneala unei singure felii este mai intensă decât cea a două felii la aceeași treaptă.

2) În cazul utilizărilor consecutive, rumeneala va fi mai intensă la ciclurile următoare.

3) Nivelul de rumenire trebuie setat înainte de începerea ciclului, nu în timpul funcționării.

4. Apăsăți mânerul în jos până când se fixează. După finalizarea ciclului, mânerul se ridică automat și puteți scoate pâinea.

Notă: Mânerul poate fi blocat doar când aparatul este conectat la priză.

5. În timpul prăjirii, puteți monitoriza gradul de rumenire. Dacă doriți să întrerupeți ciclul, rotiți selectorul spre stânga pe poziția CANCEL. La următoarea utilizare, ajustați nivelul de rumenire conform preferințelor.

ATENȚIONĂRI

1. Îndepărtați orice ambalaj protector înainte de utilizare.

2. Dacă aparatul începe să scoată fum, opriți imediat ciclul rotind selectorul pe CANCEL.

3. Evitați prăjirea alimentelor cu ingrediente lichide (ex. unt).

4. Nu încercați să scoateți pâinea blocată fără a deconecta aparatul de la priză. Aveți grijă să nu deteriorați mecanismul intern sau elementele de încălzire.

5. Fantele sunt destinate exclusiv feliilor standard de pâine.

CURĂȚARE ȘI ÎNTREȚINERE

1. Deconectați aparatul de la sursa de alimentare înainte de curățare.
2. După răcire, ștergeți exteriorul cu o cârpă moale și uscată. Nu folosiți produse abrazive sau polishuri metalice.
3. Trageți tava de firimituri din partea inferioară și goliți-o. Dacă aparatul este utilizat frecvent, curățați tava cel puțin o dată pe săptămână. Asigurați-vă că este complet închisă înainte de reutilizare.
4. La depozitare, cablul de alimentare poate fi înfășurat sub baza aparatului.

ELIMINAREA ECOLOGICĂ A PRODUSULUI



Puteți contribui la protejarea mediului!
Vă rugăm să respectați reglementările locale și să predați aparatele electrice nefuncționale la un centru autorizat de colectare a deșeurilor.

IMPORTATOR

MARELVI IMPEX SRL

Adresa: Calea Cernăuți nr. 114, Rădăuți 725400 – Suceava, România

www.marelvi.ro

USER MANUAL

TOASTER



Model: NBT265W

Read this manual carefully before use and keep it for future reference.

IMPORTANT SAFEGUARD

When using electrical appliance. Basic safety precautions should always be followed including the following:

1. Read all instruction.
2. Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the toaster.
3. Do not touch hot surface. Use handles or knobs only.
4. To protect against electrical shock, do not immerse cord, plug, or any part of the toaster in water or other liquid.
5. Close supervision is necessary when it is used by or near children.
6. Unplug unit from outlet when not in use and before cleaning.
7. Do not operate any appliance with a damaged cord or plug, or in abnormal state. If its main cord is damaged, it must be replaced by the manufacturer, the nearest service agent or a qualified person.
8. Do not let the cord hang over edge of table or counter, or touch hot surface.
9. Do not place on or near a hot gas or electric burner, or in a heated oven.
10. Do not use the appliance for other than its intended use.
11. Oversize food, metal foil packages or utensils must not be inserted in the toaster as they may cause fire or electric shock.
12. Bread may burn, therefore toasters must not be used near or below curtains and other combustible materials, they must be watched.
13. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
14. Don't attempt to dislodge food when toaster is in operation
15. Be sure to take the bread out carefully after toasting so as to avoid injuries
16. This appliance has been incorporated with a grounded plug. Please ensure the wall outlet in your house is well earthed.
17. The appliance is not intended to be operated by means of an external timer or separate remote-control system.
18. This appliance can be used by children aged from 8 years and

above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.

19. Keep the appliance and its cord out of reach of children less than 8 years.

20. Warning: if toast of small bread slices less than 85mm length, you must pay attention to the potential risk of burning when taking out the slices.


21. Don't use the appliance outdoors.

22. This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments.

23. Save these instructions.

PRODUCT INTRODUCTION

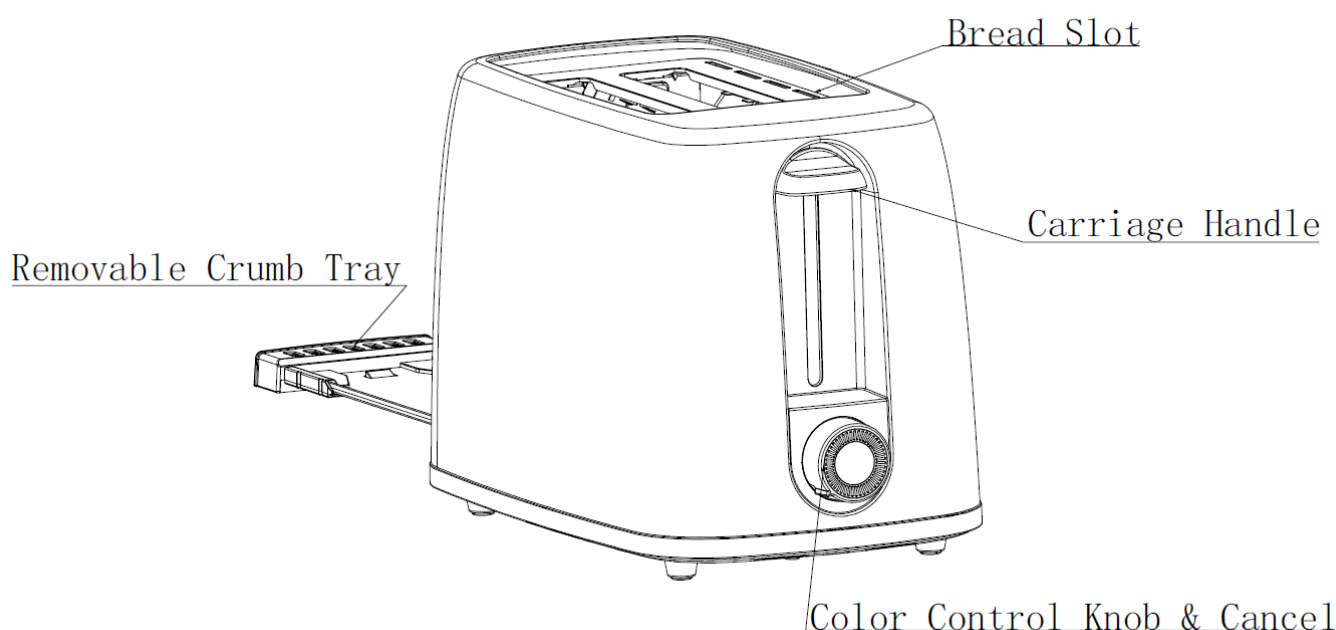

FOR THE FIRST USE

As there is manufacturing residue or oil remained in the toaster or heat element, it usually emits the odor for the first use. It is normal and will not occur after several times use. Before toasting the first slice of bread it is strongly suggested to operate the appliance following below instructions, except without bread.

OPERATION:

1. Put bread slice into the bread slot, it can be inserted two slices at most every time. Only the regular slice can be placed into the bread slot.

Note: Make sure the crumb tray is completely positioned in place before using.

2. Plug the power cord into the outlet.

3. Set color control knob to your desired color. There is 6-position level, the lowest is white and the highest is puce. The bread slice can be toasted to golden color at the position of “3”.

Note: 1) Toasting color for one side is darker than that for double bread at the same level.

2) If toasted continuously, toasting color for the latter bread is darker than the color of previous cycle at the same level.

3) The color setting should be adjusted before baking. It should not be adjusted during baking.

4. Press carriage handle down vertically until it is positioned in place, Once the bread has been toasted to the preset color, the carriage handle will be automatically sprung up, and you can remove the bread readily.

Note: The carriage handle can only be latched when the appliance connects to the power supply.

5. During the toasted process, you may observe the toasting color. If the baking requirements can be met by turning the knob to the left to CANCEL the position, you can end the baking, The next time you use it, you need to adjust the baking color range.

CAUTION:

1. Remove all protective wrapping prior to toasting.
2. If toaster starts to smoke, Turn the knob to the left to stop baking.
3. Avoid toasting the food with extremely runny ingredients such as butter.
4. Never attempt to remove bread jammed in the slots without unplugging the toaster from the electrical outlet first. Be sure not to damage the internal mechanism or heating elements when removing bread.
5. The bread slot is only applicable for toasting regular bread slice.

CLEANING AND MAINTENANCE:

1. Disconnect the power supply before cleaning.
2. Wipe the outside with soft dry cloth after toaster cools down, never use metal polish.
3. Pull out the crumb tray on the bottom of toaster by crumb tray handle and empty it. If toaster is used frequently, accumulated bread crumbs should be removed at least once a week. Make sure the crumb tray is completely closed before using the toaster again.
4. When not use or storage, the power cord may be wound under the bottom of toaster.

ENVIRONMENT FRIENDLY DISPOSAL



You can help protect the environment!
Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal centre.