nobeLTek

RO

Mașină de spălat / Manual de utilizare

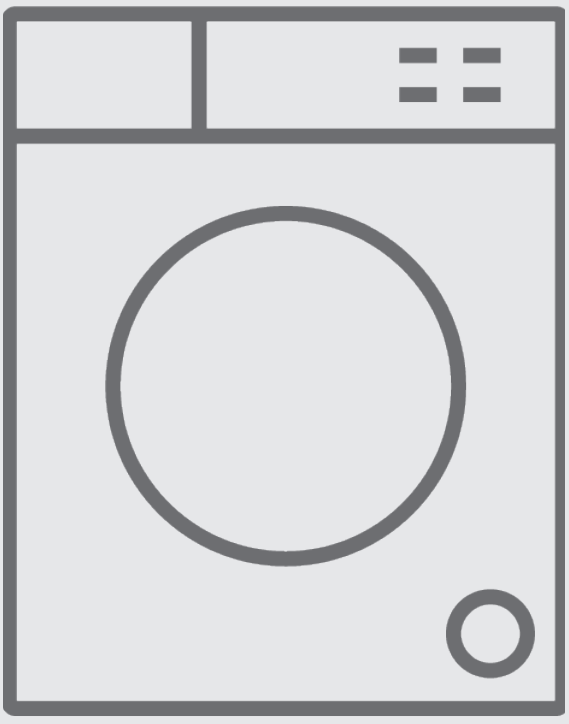

NWM612E-W

Manualul acesta oferă o prezentare completă a mașinii de spălat: design, performanțe, caracteristici tehnice, instrucțiuni de utilizare, recomandări de operare și măsuri de siguranță.
În interiorul manualului vei găsi numeroase sfaturi practice pentru folosirea și întreținerea corectă a mașinii tale de spălat. Un minim de grijă preventivă te poate scuti, pe termen lung, de timp pierdut și cheltuieli inutile. Secțiunea de depanare conține soluții rapide la cele mai frecvente probleme—aruncând mai întâi o privire acolo, s-ar putea să nu mai fie nevoie să apelezi la service.

AVERTISMENT

1. Acest aparat poate fi utilizat de copii cu vârsta de minimum 8 ani și de persoane cu capacități fizice, senzoriale sau mentale reduse ori cu experiență și cunoștințe limitate *doar* dacă au primit supraveghere sau instrucțiuni clare privind folosirea în siguranță și dacă înțeleg riscurile implicate. Copiii nu trebuie să se joace cu aparatul. Curățarea și întreținerea de rutină nu trebuie efectuate de copii fără supraveghere. Țineți copiii sub 3 ani la distanță, cu excepția cazului în care sunt supravegheați permanent.
2. Dacă cablul de alimentare este deteriorat, acesta trebuie înlocuit de producător, de un centru de service autorizat sau de personal calificat, pentru a evita orice pericol.
3. Acest aparat NU este destinat persoanelor (inclusiv copiilor) cu capacități fizice, senzoriale sau mentale reduse ori cu lipsă de experiență și cunoștințe, decât dacă sunt supravegheate sau instruite de o persoană responsabilă de siguranța lor. Supravegheați copiii pentru a vă asigura că nu se joacă cu aparatul.
4. Orificiile de ventilare nu trebuie acoperite.
5. Aparatul este conceput pentru uz casnic și aplicații similare, de exemplu:
   — bucătării pentru personal din magazine, birouri ori alte spații de lucru;
   — ferme;
   — utilizare de către clienți în hoteluri, moteluri și alte spații rezidențiale;
   — pensiuni;
   — spații comune din blocuri de locuințe sau spălătorii self-service.
6. Nu utilizați aparatul dacă articolele au fost curățate cu substanțe chimice industriale.
7. Filtrul de scame trebuie curățat frecvent!
9. Asigurați o ventilație adecvată pentru a preveni refluxul gazelor provenite de la aparate cu combustibil solid sau lichid (inclusiv șeminee).
10. Reguli de încărcare:
    — Hainele pătate cu ulei de gătit, acetonă, alcool, benzină, kerosen, soluții pentru curățat pete, terebentină, ceară ori decapant de ceară trebuie spălate în apă fierbinte cu detergent suplimentar înainte de a fi puse la uscat.
    — Folosiți balsamuri de rufe conform instrucțiunilor producătorului.
    — Nu uscați spumă de latex, căști de duș, textile impermeabile, articole cu spate din cauciuc sau perne/îmbrăcăminte cu inserții din spumă.

— Goliți buzunarele de obiecte precum brichete și chibrituri.

— **Avertizare:** Aparatul nu trebuie alimentat printr-un dispozitiv extern de comutare (de exemplu, temporizator) și nici conectat la un circuit care este pornit/oprit regulat de un serviciu public.

11. Instalare și evacuare:

— Pentru aparatele cu orificii de ventilație în bază: nu acoperiți aceste orificii cu covor.

— Aerul evacuat nu trebuie direcționat într-un coș folosit pentru evacuarea gazelor de la aparate pe gaz sau alte combustibile.

— Nu instalați aparatul în spatele unei uși cu cheie, uși glisante sau uși cu balamale pe partea opusă a aparatului, dacă acestea limitează deschiderea completă a ușii.

PRECAUȚII

DACĂ CABLUL DE ALIMENTARE ESTE DETERIORAT, ACESTA TREBUIE ÎNLOCUIT DE PRODUCĂTOR, DE AGENȚII SĂI DE SERVICE SAU DE PERSOANE LA FEL DE CALIFICATE, PENTRU A ELIMINA ORICE PERICOL.

1. Pericol electric

a. Folosiți o priză dedicată, cu împământare corectă, 220 V ~/ 10 A sau mai mult.
b. Introduceți și scoateți ștecherul doar ținând de capătul acestuia. Nu utilizați cabluri deteriorate. Dacă mufa este murdară, ștergeți-o imediat cu o cârpă uscată.
c. Nu atingeți ștecherul cu mâinile ude.
d. După utilizare, deconectați aparatul înainte de întreținere ori curățare.

2. Risc de incendiu sau scurgeri de curent

a. Nu amplasați mașina lângă surse de foc și nu puneți țigări aprinse, lumânări ori substanțe volatile pe aparat.
b. Nu stropiți direct panoul de control cu apă.
c. Nu instalați mașina într-un loc expus la umezeală excesivă.
d. Asigurați-vă că furtunul de evacuare este fixat corect și că scurgerea nu este obturată.

3. Risc de arsuri (temperatură ridicată)

a. În programele la temperatură înaltă, geamul ușii devine fierbinte; nu îl atingeți, mai ales copiii.
b. Dacă trebuie să deschideți ușa după un ciclu fierbinte, așteptați până când temperatura scade și yala se deblochează automat.

4. Risc de accidentare

a. Îndepărtați ambalajele imediat; nu lăsați copiii să le atingă ori să le înghită.
b. Interziceți copiilor să opereze sau să se urce pe mașină.
c. Țineți ușa închisă când aparatul nu este folosit, pentru a împiedica accesul copiilor în cuvă.

5. Risc de deteriorare a mașinii

a. Nu așezați obiecte grele pe aparat.
b. Manipulați mașina cu două persoane.
c. Nu permiteți intervenții ori modificări decât personalului autorizat.

6. Risc de deteriorare a rufelor

a. Nu spălați articole impermeabile (pelerine, saci de dormit, produse din puf etc.).
b. Introduceți doar articole etichetate „lavabil la mașină”. Respectați instrucțiunile de pe eticheta hainelor.

7. Risc de explozie

a. Nu spălați ori stoarceți haine impregnate cu kerosen, benzină, diluanți sau alte substanțe inflamabile.
b. Nu utilizați mașina în prezența scurgerilor de gaz.

8. Nivel de apă ridicat

Când ștecherul este scos, blocarea ușii se dezactivează chiar dacă nivelul apei în cuvă este mare. Verificați nivelul apei înainte de a deschide ușa; dacă este ridicat, nu o deschideți pentru a evita inundarea și pagubele aferente.

DENUMIREA COMPONENTELOR

Descrierea accesoriilor

Manual de utilizare	Furtun de alimentare	Capace pentru orificiile șuruburilor de transport (4 buc.)
		

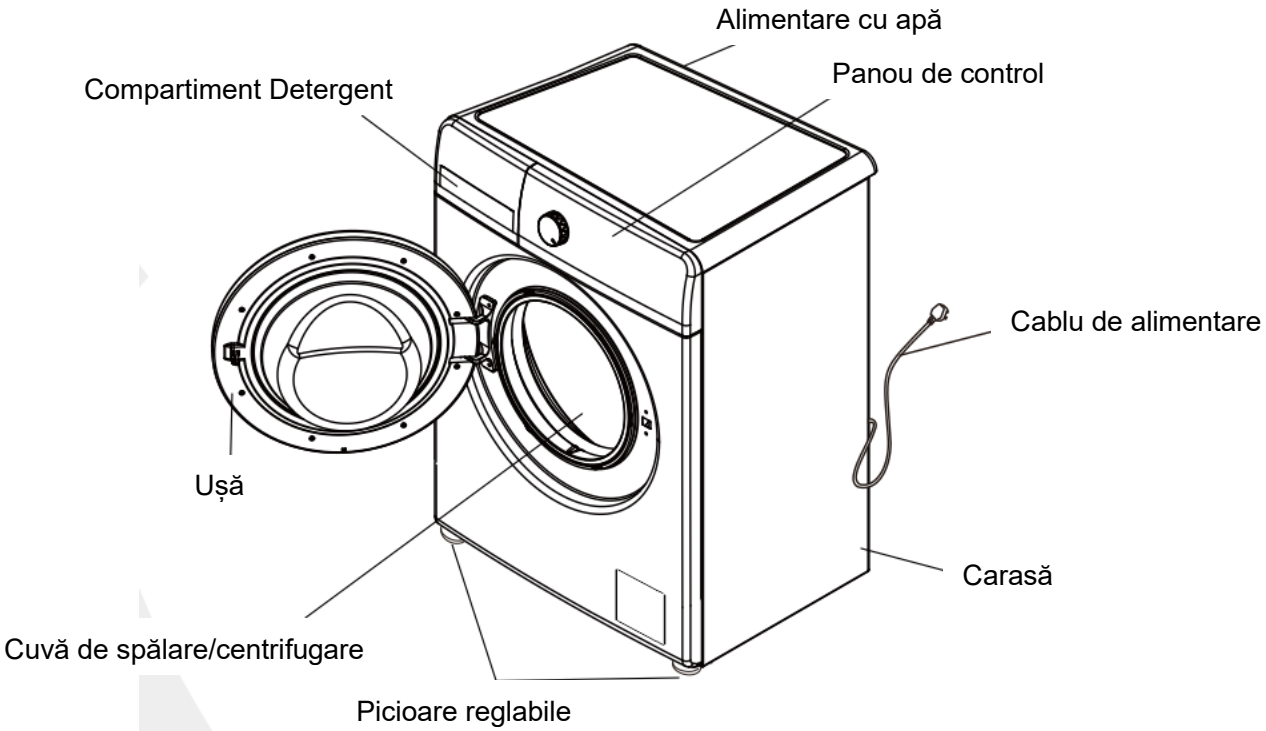

Imaginea este doar pentru referință!

Note:

1. La prima spălare, este posibil să iasă puțină apă din mașină. Aceasta provine de la testul de funcționare efectuat în fabrică și este un fenomen normal.
2. După utilizare, scoateți ștecherul din priză și închideți robinetul pentru a preveni eventuale inundații sau incendii.

INSTRUCȚIUNI DE MONTARE

- Temperatura ambientală din locul unde veți monta mașina de spălat nu trebuie să scadă sub 0 °C. Nu o instalați și nu o lăsați în aer liber.
- Respectați normele locale privind amplasarea corectă a echipamentelor.
- Dacă montați mașina pe o pardoseală acoperită cu covor, nu obturați orificiile de ventilație din bază.
- În zonele rurale, mențineți zona din jurul mașinii curată: daunele provocate de gândaci sau alte insecte nu sunt acoperite de garanție.

Șuruburi de transport

Șuruburile de transport protejează mecanismul intern pe durata transportului.

Demontare:

1. Despachetați aparatul, îndepărtați baza de protecție și mutați-l la locul de instalare.
2. Scoateți cele 4 șuruburi de transport, cu tampoanele de cauciuc și tijele din plastic (Figura 1). Dacă le lăsați la loc, vor provoca vibrații puternice, zgomot și defecțiuni. Reinstalați-le de fiecare dată când mutați mașina.
3. Astupați cele patru găuri cu dopurile din plastic furnizate (Figura 2)

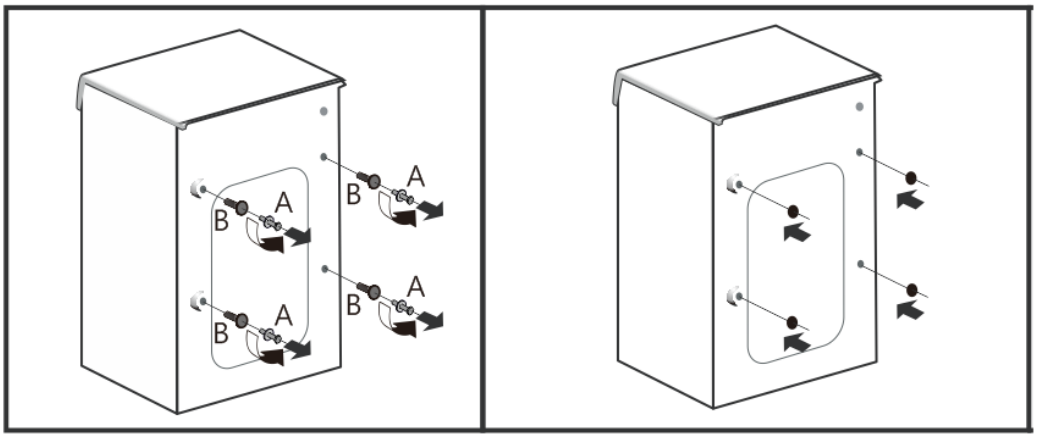

Figura 1

Figura 2

Cerințe pentru locul de instalare

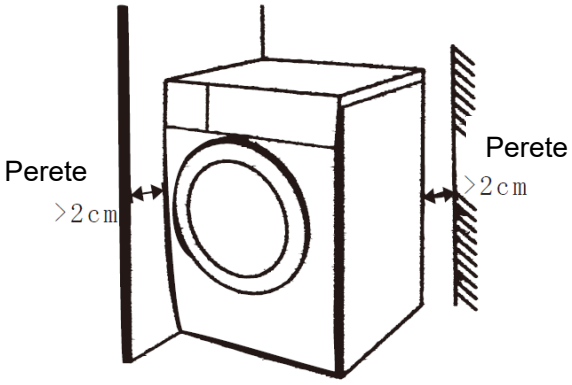

Așezare orizontală:

- Panta pardoselii să nu depășească 1°.

Priză de alimentare:

- Nu conectați alte consumatoare în aceeași priză.

Distanțe minime:

- Păstrați peste 2 cm între spatele/lateralele mașinii și peret

Pardoseală:

- Montați-o pe o suprafață solidă, perfect plană, cu scurgere în apropiere. Evitați covoarele groase sau podelele din lemn moale.

Blatul superior:

- Nu depozitați rufe sau obiecte pe capac; pot interfera cu funcționarea programelor.

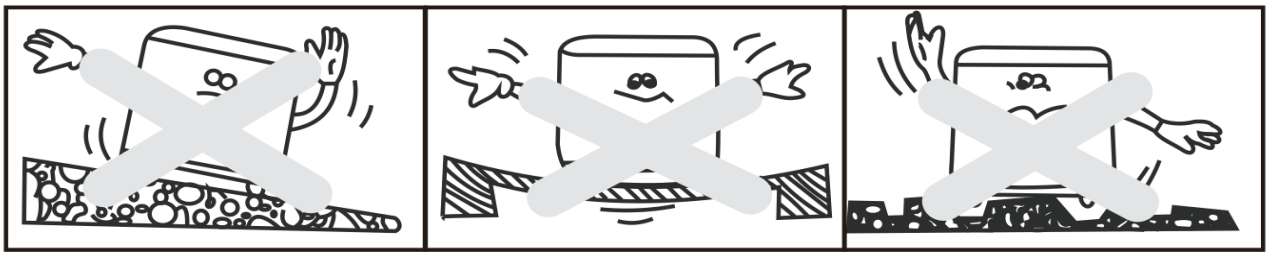

⚠ NOTE

Racordarea la alimentarea electrică

1. Nu folosiți prelungitoare sau prize multiple.
2. Dacă cablul de alimentare este deteriorat, apelați la personal autorizat pentru înlocuire.
3. După utilizare, scoateți ștecherul din priză și închideți robinetul de apă.
4. Conectați mașina la o priză cu împământare, respectând regulile de cablare.
5. Montați aparatul astfel încât accesul la priză să fie facil.

- Mașina trebuie reparată doar de specialiști. Intervențiile neautorizate pot provoca defecțiuni grave.
- Nu amplasați aparatul în medii unde temperatura poate coborî sub 0 °C (risc de îngheț al conductelor și defectare a controller-ului).
- Dacă a fost transportat iarna, lăsați-l câteva ore la temperatura camerei înainte de utilizare.

Împământare

- Aparatul trebuie împământat corespunzător pentru a elimina riscul de electrocutare.
- Rugați un electrician să verifice legătura la pământ. Nu modificați fișa dacă nu se potrivește; schimbați priza.
- Dacă apar fum sau mirosuri neobișnuite, întrerupeți imediat alimentarea și contactați service-ul.

În fabrică, mașina este testată cu apă; de aceea pot exista urme de apă în cuvă, garnitură sau pe geamul ușii—este normal.

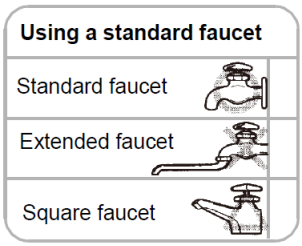

Racordarea furtunului de alimentare cu apă

1. Presiunea alimentării trebuie să fie între 30 kPa și 850 kPa.
2. La șurubarea furtunului pe valva de admisie, nu strângeți excesiv pentru a evita filetele „alunecate”.

- Furtunul are două garnituri de etanșare; asigurați-vă că sunt la loc.
- Deschideți robinetul și verificați eventualele scurgeri.
- Inspectați periodic furtunul și înlocuiți-l dacă prezintă uzură.
- Nu îndoiți și nu torsionați furtunul.

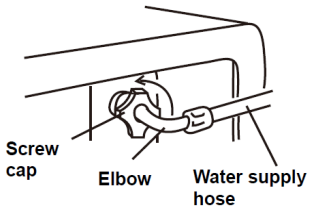

⚠ NOTĂ

Folosiți doar furtunul nou livrat împreună cu mașina; nu reutilizați un furtun vechi.

Racordarea furtunului de alimentare la robinet

1. Țineți conectorul cu o mână, apăsați inelul de blocare cu cealaltă și glisați-l în jos pentru a desprinde furtunul de alimentare.

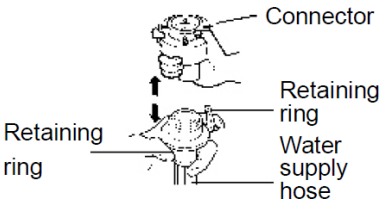

2. Slăbiți cele patru șuruburi din partea superioară a conectorului, apoi rotiți piesa inferioară astfel încât să rămână un spațiu de circa 3 filete pentru fixare.

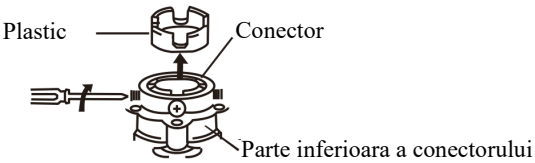

3. Strângeți uniform cele patru șuruburi până când primele două (cele dinspre perete) presează ferm pe exteriorul robinetului.

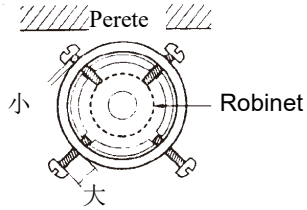

⚠ Șurubul dinspre perete poate fi înșurubat cu câteva filete în avans.

4. Așezați partea superioară a conectorului pe gura robinetului astfel încât garnitura să sigileze perfect. (Nu scoateți garnitura!) ⇒ Robinetul trebuie să aibă buză netedă; dacă este denivelată, nivelați-o cu o pilă.

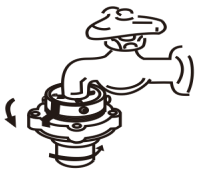

Vă rugăm să folosiți un robinet standard, cu gură netedă. Dacă este denivelată, neteziți-o cu o pilă.

5. Strângeți cu șurubelnița celelalte două șuruburi, opuse peretelui, până fac contact ferm cu robinetul.

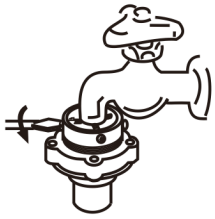

6. Rotiți piesa inferioară a conectorului până se blochează strâns; la final, jocul dintre piese trebuie să fie < 3 mm (altfel va curge apă).

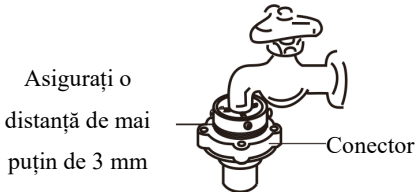

7. Pentru demontarea furtunului, apasati inelul de blocare al furtunului. 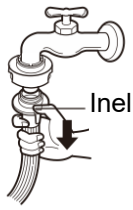 	8. Pentru montare, readuceți inelul în poziția inițială și împingeți furtunul pe conector. 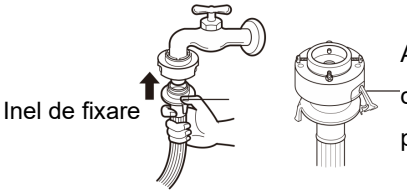

9. Verificați fermitatea îmbinărilor; strângeți capătul furtunului pe valva de admisie a mașinii, apoi deschideți robinetul încet și urmăriți eventuale scurgeri. Dacă apare apă, închideți robinetul și repetați pașii 1-9. După o perioadă lungă de utilizare, conexiunea se poate slăbi. În acest caz, reasamblați piesele urmând pașii 1-9. (Dacă este necesară reasamblarea conectorului furtunului de alimentare cu apă după o mutare, urmați din nou pașii 1-9.)

NOTE:

Dacă utilizați un robinet special (schița de mai jos), înlocuiți conectorul inițial cu cel standard furnizat și urmați aceiași pași.

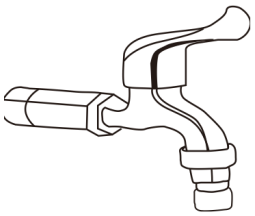	Înlocuiți conectorul original cu conectorul standard furnizat. 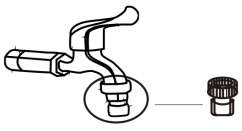 Conector standard	Țineți conectorul cu o mână, apăsați inelul de retenție cu cealaltă mână și trageți în jos pentru a separa conectorul de furtunul de alimentare cu apă. 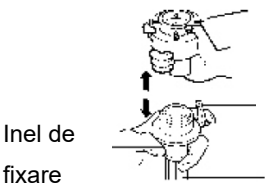 	Apăsați ambele părți ale inelului de retenție și trageți în jos pentru a introduce direct furtunul de alimentare în conectorul standard. 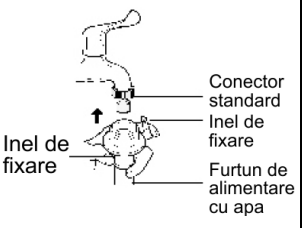

- Aparatul este destinat exclusiv uzului casnic; nu îl folosiți pe nave, rulote sau în a

- Dacă plecați o perioadă îndelungată, închideți robinetul de apă.
- Când lăsați mașina nefolosită, scoateți ștecherul și dezactivați blocarea ușii, pentru a evita ca un copil să rămână prins în interior.
- Materialele de ambalaj (folie, spumă) pot provoca sufocare – păstrați-le departe de copii.

Montarea furtunului de scurgere

- Pentru funcționarea normală a mașinii de spălat, diametrul interior sau lățimea capătului furtunului de scurgere introdus în canalizare trebuie să fie de cel puțin 4 cm.
- Înălțimea ieșirii furtunului de scurgere trebuie să fie într-un interval specificat. Pentru date exacte, consultați figura de mai jos.

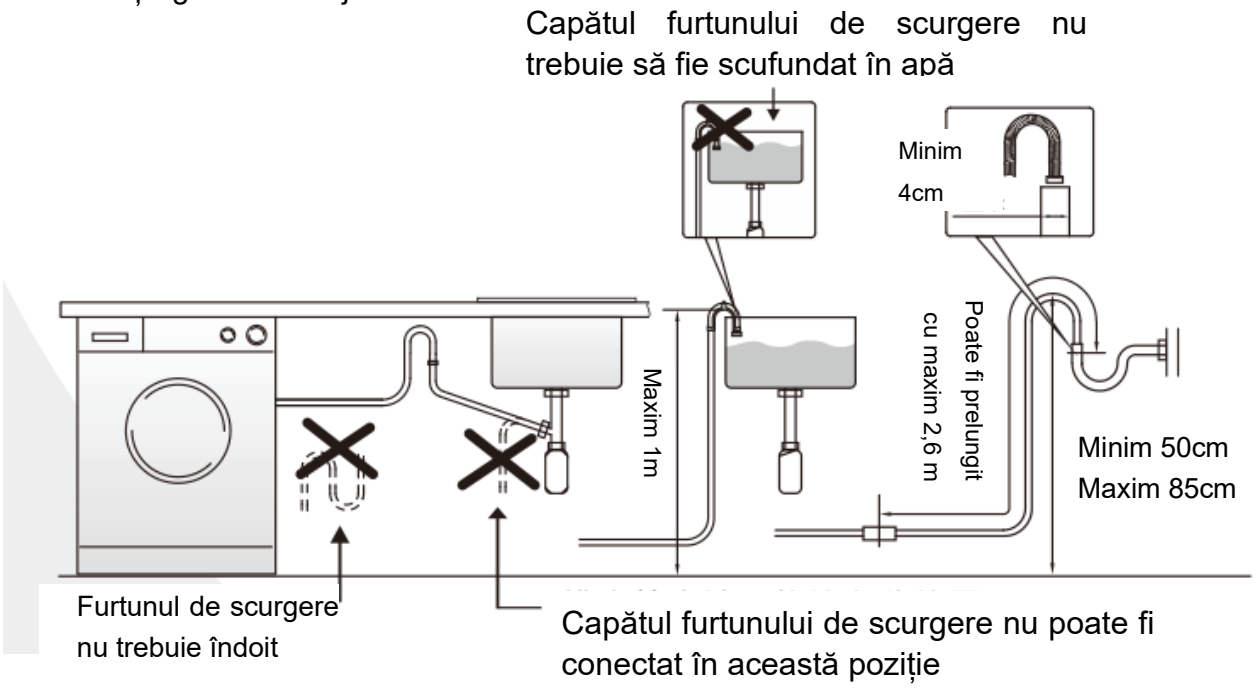

Ajustare orizontală

- Reglați nivelul mașinii de spălat pentru a evita zgomotele și vibrațiile suplimentare. Instalați mașina pe un podea dură și orizontală (preferabil în colțul camerei).
- Dacă podeaua nu este plană, reglați picioarele ajustabile. (Nu introduceți obiecte precum așchii de lemn sub picioarele ajustabile). Asigurați-vă că toate cele patru picioare ajustabile sunt în contact ferm cu podeaua și verificați orizontalitatea mașinii de spălat (se poate folosi un nivela cu bulă).
- Ajustați picioarele astfel încât mașina să stea stabilă și orizontală. După reglare, strângeți bine piulițele de blocare pentru a menține stabilitatea.
- Nu așezați mașina pe o masă sau pe un suport pentru a evita riscul de cădere accidentală.
- Apăsați în orice punct pe diagonalele blatului mașinii; aceasta nu trebuie să se clatine.

(Verificați pe ambele diagonale. Dacă mașina încă se clatină, reglați din nou picioarele ajustabile.)

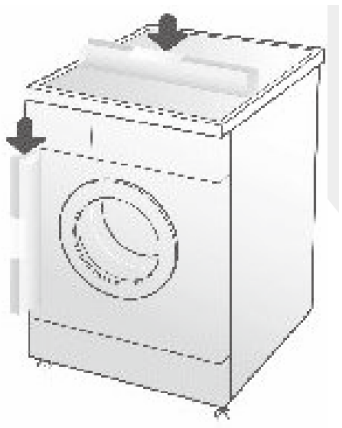

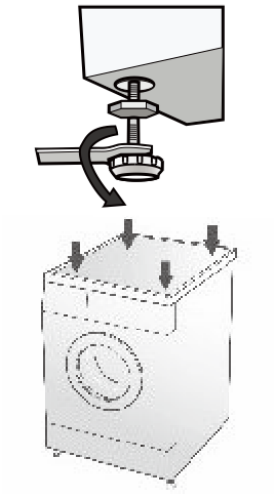

BLOCAREA ȘI DEBLOCAREA UȘII

Blocarea ușii

După pornire, ușa se va încuia automat și nu poate fi deschisă. Atunci, indicatorul „Lock” de pe panoul de control se aprinde.

Deblocarea ușii

- Când indicatorul „Lock” de pe panoul de control este aprins, apăsați butonul „Start/Stop”. După ce tamburul de spălare/stoarcere se oprește din rotire, așteptați 2 minute până când ușa se descuie automat.
- În timpul spălării, din tambur pot ieși spume. Prindeți-le cu un prosop.
- În timpul spălării, ușa nu poate fi deschisă dacă temperatura este ridicată.
- În timpul spălării, ușa nu poate fi deschisă dacă nivelul apei este ridicat.

UTILIZAREA COMPARTIMENTULUI PENTRU DETERGENT

Compartiment detergent multi-secțiune

Detergent lichid – înălbitor

- Folosiți detergenți lichizi sintetici cu spumă redusă.
- Dacă folosiți detergenți concentrați, diluați-i cu apă în proporție 2:1 și turnați-i în compartimentul de detergent.

Curățați compartimentul de detergent în prealabil

- Dacă hainele sunt foarte murdare, adăugați detergentul corespunzător după selectarea funcției de pre-spălare. (Cantitatea de detergent variază în funcție de model.)

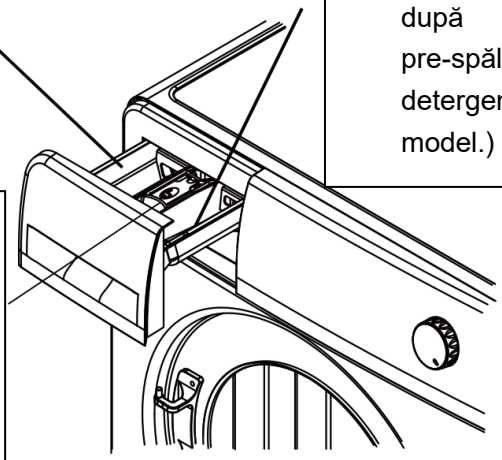

Balsam de rufe

- Adăugați balsamul înainte de spălare. Mașina va injecta automat balsamul în tambur în timpul clătirii finale.
- Dacă folosiți balsam concentrat, diluați-l corespunzător cu apă și turnați-l uniform în compartimentul de detergent.
- Nu depășiți linia „Max”.

Compartiment detergent pătrat simplu

Detergent lichid – înălbitor

- Folosiți detergenți lichizi sintetici cu spumă redusă.
- Dacă folosiți detergenți concentrați, diluați-i cu apă în proporție 2:1 și turnați-i în compartimentul de detergent.

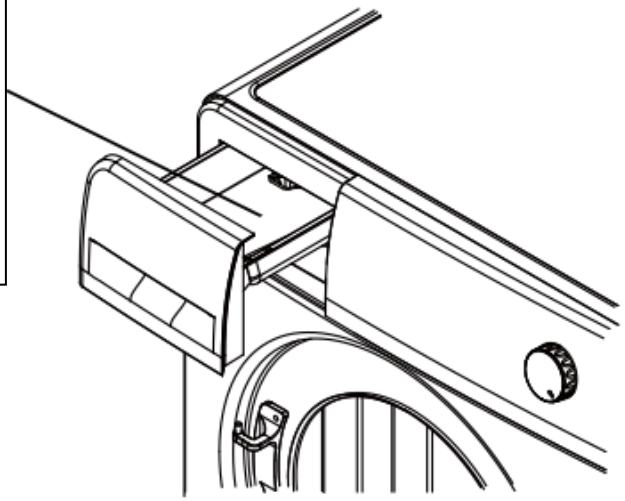

- Folosiți detergenți special concepuți pentru mașini de spălat cu tambur.
- Nu folosiți detergent în exces, deoarece spuma prea abundentă poate afecta clătirea sau

cauza defecțiuni.

- Urmați instrucțiunile producătorului privind tipul detergentului în funcție de felul și culoarea hainelor, temperatura apei, gradul de murdărie etc.
- Utilizarea detergentului potrivit asigură un efect bun de spălare și este benefică pentru mediu.

MĂSURI DE SIGURANȚĂ ÎNAINTE DE SPĂLARE

1. Eticheta de întreținere

- Citiți etichetele de întreținere ale hainelor. Tipul, materialele și metoda de spălare sunt indicate pe etichetă.

2. Spălați hainele după tip

Pentru un rezultat optim, spălați în același ciclu doar un singur tip de haine.

Temperatura apei, viteza de centrifugare și programele variază în funcție de haine. Hainele închise la culoare trebuie spălate separat de cele deschise și albe. Hainele vopsite și cele din catifea de bumbac trebuie spălate separat, altfel hainele albe pot fi pătat. Dacă este posibil, nu spălați haine foarte murdare împreună cu haine moderately murdare.

• Gradul de murdărie (sever, moderat, ușor) • Culoarea (alb, deschis, închis) • Catifeaua de bumbac (haine ale căror fire de catifea cad ușor sau care aderă la firele de catifea)	• Spălați după tipul hainelor și gradul de murdărie • Hainele albe trebuie spălate separat de cele colorate. • Hainele cu catifea de bumbac ușor desprinzătoare și cele care aderă la catifea trebuie tratate separat.

		
Verificați dacă hainele pot fi spălate la mașină	Pentru hainele cu nasturi sau accesorii ușor deteriorabile, spălați-le pe dos	Îndepărtați praful și nămolul de pe haine înainte de spălare

 Scoateți din buzunare obiecte precum chei, agrafe, ace și monede	 Introduceți hainele delicate într-o sacoșă specială pentru rufe înainte de spălare	 Spălați separat hainele cu pete de ulei sau hainele care se pot decolora ușor

PANLUL DE CONTROL

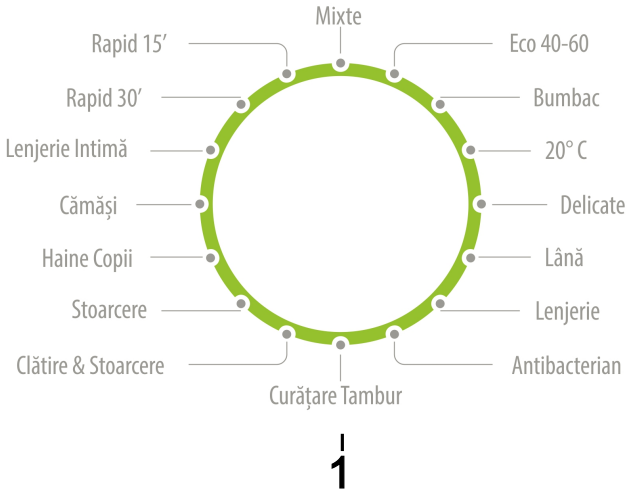

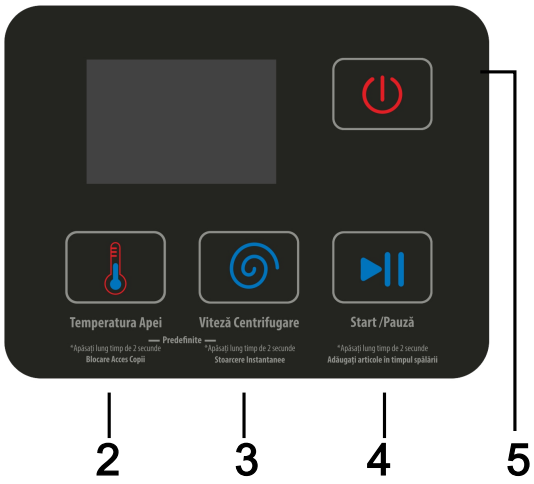

1. **Selectarea programului**
   - Alege programul potrivit în funcție de tipul hainelor și gradul de murdărie.
2. **Butonul "Temp"**
   - Selectează temperatura apei în funcție de haine și de cât de murdare sunt.
   - Intervalul temperaturii variază în funcție de program; unele programe nu necesită reglarea temperaturii.
   - După pornirea programului, ține apăsat peste 2 secunde pentru a activa/dezactiva funcția de blocare pentru copii. Cu blocarea activată, doar butonul „POWER" funcționează, restul sunt dezactivate.
3. **Buton „Viteză stoarcere"**
   - Alege viteza de stoarcere în funcție de cantitatea și tipul hainelor.
   - Intervalul vitezei diferă în funcție de program.
   - După conectarea la curent, ține apăsat 2 secunde pe acest buton înainte de a

porni mașina pentru a intra în modul „Stoarcere simplă”.

4. **Buton „Start/Pauză”**
   - Apasă pentru a porni programul.
   - În timpul funcționării, apasă pentru a pune pe pauză și apasă din nou pentru a relua.
   - Ține apăsat 2 secunde pentru a deschide temporar ușa și a adăuga haine.
5. **Buton „Power”**
   - Pornește sau oprește mașina.
   - După terminarea programului, apasă pentru a opri complet mașina.
6. **Buton „Programare pornire”**
   - Apasă simultan „Temp” + „Viteză stoarcere” pentru a activa funcția de programare.
   - Fiecare apăsare crește timpul până la pornirea programată cu 1 oră, între 1 și 24 de ore.

DESCRIEREA PROGRAMELOR

Utilizarea programelor standard

1. Pregătirea spălării
   - Deschide ușa, adaugă hainele în tambur și închide ușa.
   - Trage compartimentul pentru detergent, adaugă detergentul și balsamul, apoi închide compartimentul.
   - Conectează furtunul de alimentare cu apă și asigură-te că robinetul este deschis.
2. Apasă butonul „Power” pentru pornire.
3. Selectează programul dorit cu selectorul rotativ, dintre următoarele:

Mixed — ECO40-60 — Cotton — 20℃ — Gentle — Wool — Night — Antibacterial — Drum Clean — Rinse Spin — Spin — Kid Wear — Shirts — Underwear — Quick30’ — Quick15’

4. Apasă butonul „Start/Pause” pentru a începe spălarea.
5. După finalizarea programului:
   - LED-ul clipește și mașina emite un semnal sonor.
   - Deschide ușa și scoate hainele.
   - Scoate ștecherul din priză și închide robinetul.

Utilizarea programelor personalizate

1. Pregătirea spălării
   - Deschide ușa, adaugă hainele în tambur și închide ușa.
   - Trage compartimentul pentru detergent, adaugă detergentul și balsamul, apoi închide compartimentul.

- Conectează furtunul de alimentare cu apă și deschide robinetul.

2. Apasă butonul „Power” pentru pornire.
3. Selectează programul dorit cu selectorul rotativ.
4. Apasă „Temp” / „Viteză stoarcere” / „Temp + Viteză stoarcere” pentru a seta temperatura, viteza de stoarcere și timpul de pornire întârziată.
5. Apasă butonul „Start/Pause” pentru a începe programul.
6. După finalizare:
   - LED-ul clipește și mașina emite un semnal sonor.
   - Deschide ușa și scoate hainele.
   - Scoate ștecherul din priză și închide robinetul.

PROGRAMELE DE SPĂLARE

Program	Temperatură apă (℃)	Clătiri (nr.)	Încărcătură max.	Tipuri de haine
Mixte	40 / 20	2	≤ 4 kg	Bumbac / sintetice
Eco 40-60	/	2	Capacitate nominală	Bumbac / sintetice foarte murdare
Bumbac	40 / 60 / 85 / 20	2	Capacitate nominală	Țesături din bumbac obișnuit
20℃	20	2	≤ 3 kg	Haine groase / puf
Delicate	40 / 20	2	≤ 3 kg	Bumbac / sintetice
Lână	20	2	≤ 3 kg	Lână lavabilă la mașină
Lenjerie	40 / 60 / 20	2	≤ 4 kg	Bumbac + in / sintetice
Antibacterian	85	2	≤ 4 kg	Bumbac pentru igienizare / dezinfectare
Curățare tambur	85	2	/	Curățare tambur / igienizare
Clătire + Stoarcere	/	1	Capacitate nominală	Bumbac / sintetice
Stoarece	/	/	Capacitate nominală	Bumbac / sintetice
Haine copii	60 / 85 / 20 / 40	3	≤ 4 kg	Bumbac ușor murdar / eliminare miros
Cămăși	40 / 20	2	≤ 4 kg	Bumbac / sintetice
Lenjerie intimă	40 / 60 / 20	2	≤ 3 kg	Bumbac / sintetice
Rapid 30’	20	2	≤ 2 kg	Haine puțin murdare / prosoape folosite frecvent
Rapid 15’	20	2	≤ 2 kg	Haine puțin murdare / prosoape folosite frecvent

Note:

1. Temperatura și viteza de stoarcere afișate primele sunt cele implicite. Se pot modifica manual.
2. Durata reală a spălării poate varia în funcție de presiunea apei, condițiile de drenaj, tipul de țesături și temperatura apei.
3. În caz de pană de curent, mașina își reia ciclul de la momentul întreruperii.

ÎNTREȚINERE ȘI SERVICE

Generalități

- După utilizare îndelungată, se recomandă service imediat. Întreținerea corectă prelungește durata de viață a mașinii.
- Înainte de orice intervenție, scoateți ștecherul din priză pentru a evita accidentele.

Curățarea carcasei

- Ștergeți carcasa cu o cârpă moale și curată după fiecare utilizare.
- Pentru pete persistente, folosiți o cârpă înmuiată în detergent slab sau apă cu săpun.

Nu:

- Nu pulverizați apă direct pe carcasă.
- Nu folosiți substanțe chimice agresive: pudră abrazivă, diluanți, benzină, alcool etc.

Curățarea garniturii ușii

Ștergeți garnitura cu un prosop după fiecare utilizare.
Îndepărtați scamele, firele sau obiectele străine (ex. ace) din pliuri.

Curățarea compartimentului pentru detergent

- Curățați regulat pentru a preveni formarea mucegaiului.
- Apăsați zona desemnată și extrageți sertarul. Spălați cu apă și reintroduceți-l.

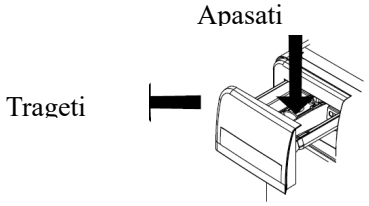

Dacă mașina este înghețată

1. Înveliți robinetul și cuplajul cu un prosop înmuiat în apă caldă (~50℃).
2. Scoateți furtunul de alimentare și înmuiați-l în apă caldă (~50℃).
3. Turnați 2–3 litri de apă caldă în cuvă.
4. Reconectați furtunul, porniți robinetul, porniți mașina și verificați alimentarea și evacuarea apei.

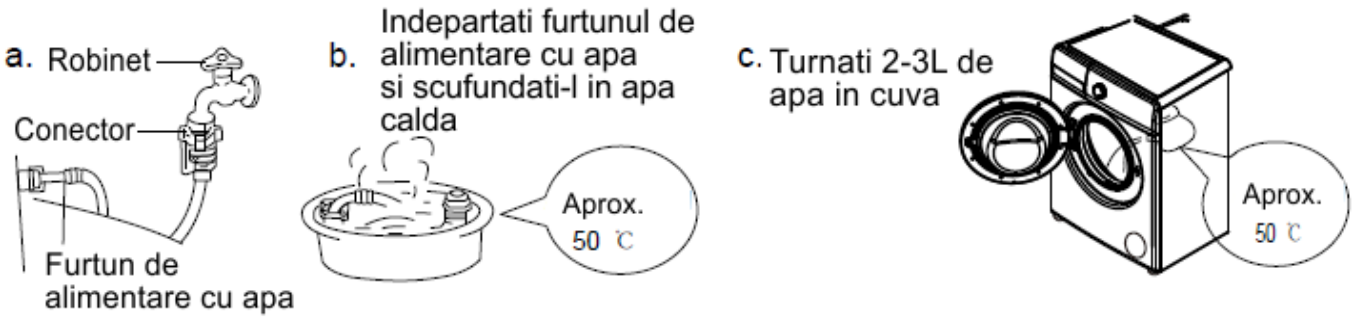

Programe de curățare recomandate

Autocurățare tambur (o dată pe lună)

- Elimină murdăria din interiorul tamburului.
- Nu adăugați haine sau detergent în timpul programului.

Notă: În timpul autocurăţării, nu adăugaţi haine sau detergent.

Curățarea cuplajului universal *(recomandată la fiecare 6 luni)*

1. Scoateţi furtunul de alimentare de la cuplaj.
2. Deșurubaţi colierul urmând direcţia săgeţii.
3. Clătiţi interiorul colierului cu apă.
4. Reinstalaţi colierul curățat și reconectaţi furtunul de alimentare.

.

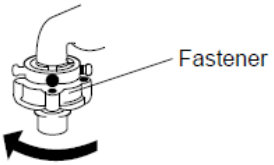

Curățarea supapei de admisie *(recomandată la fiecare 6 luni)*

1. Scoateţi furtunul de alimentare din maşina de spălat.
2. Extrageţi sita filtrantă din valvă.
3. Curăţaţi sita temeinic cu o periuţă de dinţi sau unealtă similară.
4. Reinstalaţi sita și reconectaţi furtunul.

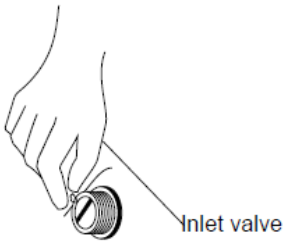

Curățarea filtrului pompei de evacuare *(recomandată lunar)*

1. După ce apa a fost evacuată complet, scoateţi ştecherul din priză.
2. Apăsaţi clema de deasupra capacului decorativ al pompei (colţul dreapta jos, faţă) și deschideţi-l.

Atenție: dacă în cuvă este apă fierbinte, aşteptaţi să se răcească.

3. Rotiţi filtrul în sens invers acelor de ceasornic şi scoateţi-l.
4. Spălaţi-l bine cu apă curată.
5. Reintroduceţi filtrul, strângeţi-l bine (sensul acelor de ceasornic) și închideţi capacul.

Note:

a. Filtrul trebuie strâns ferm pentru a preveni scurgerile.
b. Nu curățați filtrul în timp ce rulează un program.

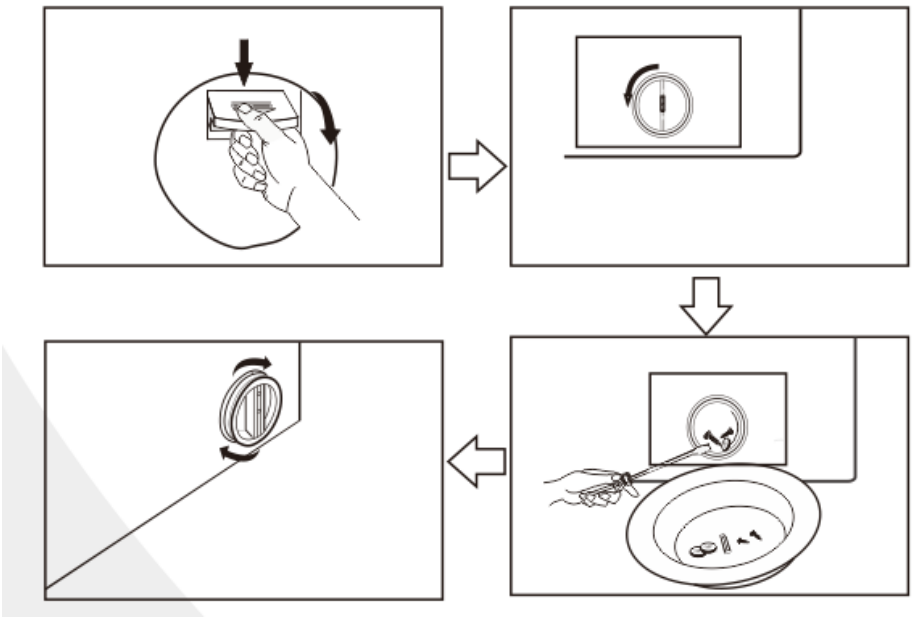

GHID DE DEPANARE

Problemă	Verifică	Soluții
Mașina nu pornește	- Butonul „Power” sau „Start/Pause” nu a fost apăsat - Fişa nu este introdusă - Pană de curent - Protecţia la scurgeri este decuplată	- Apasă „Power” / „Start” - Introdu fișa în priză - Așteaptă revenirea curentului - Reactivează protecţia la scurgeri
Centifugare anormală	- Șuruburile de transport nu au fost scoase - Mașina nu este pe o suprafață dreaptă - Haine izolate în cuvă - Picioarele nu sunt strânse	- Scoate șuruburile de transport - Nivelează mașina - Adaugă haine similare - Strânge piulițele de blocare ale picioarelor
Eroare alimentare cu apă (E01)	- Robinetul este închis - Nu e apă sau presiune scăzută - Furtunul este înghețat - Filtrul sau supapa de admisie este blocat	- Deschide robinetul - Așteaptă revenirea apei - Dezgheață furtunul cu apă caldă - Curăță filtrele din furtun și supapa de admisie
Eroare evacuare (E03)	- Furtunul de evacuare este prea sus - Furtunul este înghețat - Furtunul este blocat - Scurgerea este blocată	- Coboară furtunul (< 1m) - Dezgheață furtunul - Curăță furtunul - Curăță canalul de scurgere

Eroare ușă (E02)	- Ușa nu este închisă complet	- Închide ușa complet
Eroare încălzire (E06)	- Închide robinetul și scoateti aparatul din priza. Contactează un service autorizat	
Aport continuu de apă (E04)	- Închide robinetul și scoateti aparatul din priza. Contactează un service autorizat	
Prea multă spumă	- Ai folosit detergent special pentru mașini cu încărcare frontală?	- Folosește detergent adecvat în cantitate corespunzătoare

Notă: Următoarele situații nu reprezintă defecțiuni

Simptom	**Explicație**
Ușa nu se poate deschide	Un program este în desfășurare. Ușa se blochează automat pentru siguranță și se deblochează doar după terminarea ciclului.
Miros ciudat	Mirosul provine de la componentele din cauciuc. Este normal la început și va dispărea după câteva utilizări.
Cantitate mică de apă la spălare/clătire	Mașinile de spălat cu tambur folosesc mai puțină apă pentru eficiență – acest lucru este normal.
Intrare de apă în timpul funcționării	Dacă nivelul apei scade, mașina completează automat cantitatea necesară.
Evacuare a apei în timpul spălării	Poate apărea dacă s-au folosit detergenți excesivi sau cu spumare puternică.
Timpul rămas se modifică în timpul programului	Dacă rufele sunt distribuite neuniform în tambur, durata ciclului de centrifugare poate crește pentru a corecta dezechilibrul. De asemenea, presiunea scăzută a apei poate prelungi timpul de alimentare.
Zgomote neobișnuite în timpul centrifugării	Verificați dacă: – Cablu de alimentare atinge carcasa; – Șuruburile de transport au fost îndepărtate; – Sunt obiecte străine (agrafă, monede) în tambur.

TABEL SPECIFICAȚII – MODEL XQG60-1016P

Parametru	Valoare
Capacitate nominală spălare	6,0 kg
Capacitate nominală centrifugare	6,0 kg
Tensiune nominală	220V–240V ~ 50Hz
Putere nominală spălare	250 W
Putere nominală centrifugare	500 W
Putere nominală încălzire	1800 W
Putere maximă	2000 W
Zgomot spălare	62 dB(A)
Zgomot centrifugare	75 dB(A)
Presiune apă admisă	0,05 – 0,85 MPa
Dimensiuni (L × A × Î)	598 × 445 × 845 mm
Standarde aplicabile	GB4343.1, GB4706.1, GB4706.24, GB19606, GB17625.1, GB12021.4

În conformitate cu limitele de zgomot din GB19606

NUMELE ȘI CONȚINUTUL SUBSTANȚELOR PERICULOASE UTILIZATE ÎN ACEST APARAT

Componentă	Hazardous substances					
	Plumbum (Pb)	Hydrargyrum (Hg)	Cadmium (Cd)	Hexavalent chromium Cr (VI)	Polybrominated biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)
Încuietoare ușă	×	○	○	○	○	○
Placă de bază	×	○	○	○	○	○
Cablu de alimentare	○	○	○	○	○	○
Șuruburi și piulițe	○	○	○	○	○	○
Senzor de nivel al apei	○	○	○	○	○	○
Valvă de evacuare	○	○	○	○	○	○
Motor	×	○	○	○	○	○
Curea, scripete	○	○	○	○	○	○
Ansamblul ușii	○	○	○	○	○	○
Ansamblul capacului superior	○	○	○	○	○	○
Componente panou de control	○	○	○	○	○	○
Carcasă	○	○	○	○	○	○
Tambur interior	○	○	○	○	○	○
Bază	○	○	○	○	○	○
Sertar pentru detergent	○	○	○	○	○	○
Tambur de spălare interior și exterior	○	○	○	○	○	○

Note:

1. Acest tabel este întocmit în conformitate cu SJ/T 11364.
2. ○: Indică faptul că conținutul acestei substanțe periculoase în toate materialele omogene utilizate pentru această componentă este sub limita specificată în GB/T26572.
3. X: Indică faptul că conținutul acestei substanțe periculoase în cel puțin unul dintre materialele omogene utilizate pentru această componentă este peste limita specificată în GB/T26572.

Parameters

Parametru	Valoare		Parametru	Valoare	
Capacitate nominala (kg)	6,0		Dimensiuni in cm	Inaltime	84.5
				Latime	59.8
				Adancime	44.5
EEI_W ([a])	91		Clasa de eficienta energetica ([a])	E (c)	
Indice de eficienta energetica ([a])	1.03		Eficienta clatire (g/kg) ([a])	5	
Consum de eneregie in kWh per ciclu, bazat pe programul eco 40-60 Consumul real de energie va depinde de modul in care este utilizat aparatul.	0.735		Consum de apa in litri per ciclu, bazat pe prgramul eco 40-60. Consumul real de apa va depinde de modul in care este utilizat aparatul si de duritatea apei.	43	
Temperatura maxima in interiorul materialului tratat ([a]) (°C)	Capacitate nominala	45	Continut de umiditate rezidual ([a]) (%)	58	
	Jumatete	35			
	Sfert	25			
Viteza centrifugare ([a]) (rpm)	Capacitate nominala	1200	Clasa energetica la centrifugare ([a])	C (c)	
	Jumatate	1200			
	Sfert	1200			
Durata program ([a]) (h:min)	Capacitate nominala	3:18	Tip	free-standing	
	Jumatate	2:30			
	Sfert	2:30			
Emisii de zgomot acustic in Aer in faza de centrifugare ([a]) (dB(A) re 1 pW)	75		Clasa de emisii de zgomot acustic in aer ([a]) (faza de centgrifugare)	B (c)	
Mod oprit (W)	0.45		Mod standby (W)	0.49	
Pornire intarziata (W) (daca este cazul	—		Standby in retea (W) (daca este cazul)	—	
Durata minimă a garanției oferite de furnizor ([b]):			—		
Acest produs a fost proiectat pentru a elibera ioni de argint in timpul ciclului de spalare			No		

Informatii suplimentare:	—

(a) Pentru programul eco 40-60.
(b) Modificarile aduse acestor elemente nu vor fi considerate relevante in sensul paragrafului 4 al Articolului 4 din Regulamentul (UE) 2017/1369.
(c) Daca baza de datea produselor genereaza automat continutul definitiv al acestei celule, furnizorul nu va introduce aceste date

(d)

Parametri

PARAMETRU	UNITATE	VALOARE
Capacitate nominală pentru programul Eco 40-60, la intervale de 0,5 kg	kg	6.0
Consumul de energie al programului Eco 40-60 la capacitate nominală	kWh/cycle	1. 06
Consumul de energie al programului Eco 40-60 la jumătate din capacitatea nominală	kWh/cycle	0. 6
Consumul de energie al programului Eco 40-60 la un sfert din capacitatea nominală	kWh/cycle	0. 3
Consumul ponderat de energie al programului Eco 40-60	kWh/cycle	0. 735
Consumul standard de energie al programului Eco 40-60	kWh/cycle	74
Indice de Eficiență Energetică	-	E
Consumul de apă al programului Eco 40-60 la capacitate nominală	L/cycle	52
Consumul de apă al programului Eco 40-60 la jumătate din capacitatea nominală	L/cycle	38
Consumul de apă al programului Eco 40-60 la un sfert din capacitatea nominală	L/cycle	32
Consumul ponderat de apă	L/cycle	43
Indicele de eficiență a spălării pentru programul Eco 40-60 la capacitate nominală	-	1. 03
Indicele de eficiență a spălării pentru programul Eco 40-60 la jumătate din capacitatea nominală	-	1. 03
Indicele de eficiență a spălării pentru programul Eco 40-60 la un sfert din capacitatea nominală	-	1. 03
Eficiența clătirii pentru programul Eco 40-60 la capacitate nominală	g/kg	5
Eficiența clătirii pentru programul Eco 40-60 la jumătate din capacitatea nominală	g/kg	5
Eficiența clătirii pentru programul Eco 40-60 la un sfert din capacitatea nominală	g/kg	5
Durata programului Eco 40-60 la capacitate nominală	h/min	3:18
Durata programului Eco 40-60 la jumătate din capacitatea nominală	h/min	2:30
Durata programului Eco 40-60 la un sfert din capacitatea nominală	h/min	2:30
Temperatura atinsă pentru minimum 5 min în interiorul încărcăturii în timpul programului Eco 40-60 la capacitate nominală	℃	45

Temperatura atinsă pentru minimum 5 min în interiorul încărcăturii în timpul programului Eco 40-60 la jumătate din capacitatea nominală	℃	35
Temperatura atinsă pentru minimum 5 min în interiorul încărcăturii în timpul programului Eco 40-60 la un sfert din capacitatea nominală	℃	25

Parametri

PARAMETRU	UNITATE	VALOARE
Viteza de centrifugare în faza de centrifugare a programului Eco 40-60 la capacitate nominală	rpm	1200
Viteza de centrifugare în faza de centrifugare a programului Eco 40-60 la jumătate din capacitatea nominală	rpm	1200
Viteza de centrifugare în faza de centrifugare a programului Eco 40-60 la un sfert din capacitatea nominală	rpm	1200
Conținutul de umiditate rămas pentru programul Eco 40-60 la capacitate nominală	%	55
Conținutul de umiditate rămas pentru programul Eco 40-60 la jumătate din capacitatea nominală	%	60
Conținutul de umiditate rămas pentru programul Eco 40-60 la un sfert din capacitatea nominală	%	60
Conținutul ponderat de umiditate rămas	%	58
Emisii de zgomot acustic în aer în timpul programului Eco 40-60 (faza de centrifugare)	dB(A) re 1 pW	75
Consum de energie în modul 'oprit'	W	0.45
Power consumption in ‘standby mode’	W	0.49
Modul 'standby' include afișarea informațiilor?	—	NO
Consum de energie în 'modul standby' în condiții de standby în rețea (dacă este cazul)	W	—
Consum de energie în 'pornire întârziată' (dacă este cazul)	W	—

Tensiune nominală	220-240V~,50Hz
Putere nominală de spălare	250 W
Putere nominală de centrifugare	500W
Putere nominală de încălzire	1800W
Putere maximă	2000W
Presiunea apei	0.05-0.85Mpa
Dimensiuni generale (mm)	598*445*845

Programul Eco 40-60 este capabil să curețe rufele de bumbac, cu murdărie normală, declarate a fi spălabile la 40°C sau 60°C, împreună în același ciclu. Acest program este utilizat pentru evaluarea conformității cu legislația UE privind ecoproiectarea.

Eliminarea corectă a acestui produs



Acest marcaj indică faptul că acest produs nu trebuie aruncat împreună cu alte deșeuri menajere în întreaga UE. Pentru a preveni posibilele daune asupra mediului sau sănătății umane cauzate de eliminarea necontrolată a deșeurilor, reciclați-l în mod responsabil pentru a promova reutilizarea sustenabilă a resurselor materiale. Pentru a returna produsul dumneavoastră folosit, vă rugăm să utilizați sistemul de returnare și colectare sau să contactați retailerul de la care ați achiziționat produsul. Aceștia pot prelua acest produs pentru reciclare ecologică sigură.

Importator:

Marelvi Impex SRL
Calea Cernauti 114, Radauti, Suceava, Romania, 725400

www.marelvi.ro

nobeLTek

EN Washing machine / User manual

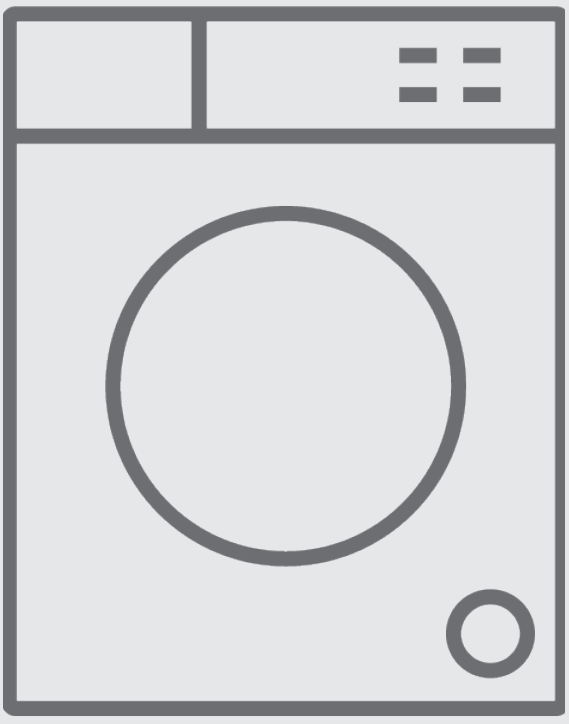

NWM612E-W

This manual provides a complete overview of your washing machine: design, performance, technical features, instructions for use, operating recommendations and safety precautions.
Inside the manual you will find numerous practical tips for the correct use and maintenance of your washing machine. A minimum of preventive care can save you, in the long run, from wasted time and unnecessary expenses. The troubleshooting section contains quick solutions to the most common problems—taking a look there first may save you from having to call for service.

WARNING

1. This appliance can be used by children aged from 8 years and above and persons with reduced physical sensory or mentalcapabilities or lack of experienceand knowledge if they have been givensupervisionor instruction conceming use of the appliance in a safe way and understand the hazards involved.Children shall not play with the appliance. Cleaning and user maintenance shall not bemade by children without supervision.
   Children of less than 3 years should be kept away unless continuously supervised.

2. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision orinstruction concerning use of the appliance by a person responsible for their safety
   Children should be supervised to ensure that they do notplaywith the appliance.

4. The openings must not be obstructed by a carpet.

5. This appliance is intended to be used in household and similar applications such as:
   —staff kitchen areas in shops, offices and other working environments;
   —farm houses;
   —by clients in hotels, motels and other residential type environments:
   —bed and breakfast type environments;
   —areas for communal use in blocks of fats or in launderettes
6. The machine is not to be used if industrial chemicals have been used for cleaning,

7. The lint trap has to be cleaned frequently!

8. Lint must not to be allowed to accumulate around the machine.

9. Adequate ventilation has to be provided to avoid the back flow of gases into the room from appliances burning other fuels, including open fires.

10.

—Items that have been soiled with substances such as cooking oil, acetone,alcohol, petrol kerosene spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before

—Fabric softeners or similar products, should be used as specified by the fabric softener instructions.

—Remove all objects from pockets such as lighters and matches.

11.

—WARNING: The appliance must not be supplied through an extemal switching device such as a timer, or connected to a circuit that is regularly switched on and off by a utility

12.

—For appliances with ventilation openings in the base. that a carpet must not obstruct the openings.

—That exhaust air must not be discharged into a flue which is used for exhausting fumes from appliances burning gas or other fuels.

—That the appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the machinev in such a way that a full opening of the machine door is restricted.

PRECAUTIONS

IF THE SUPPLY CORD IS DAMAGED, IT MUST BE REPLACED BY THE MANUFACTURE, ITS SERVICE AGENT OR SIMILARLY QUALIFIED PERSONS IN ORDER TO AVOID A HAZARD.

1. **Electrical hazard:**
   a. Please use a special power socket with good grounding and above 220V ~ 10A.
   b. Please take the plug to insert and pull out the power cord. Do not use damaged power cord. When there is dirt on the plug-in of the power cord, wipe it with a dry cloth in time.
   c. Do not plug or pull the power plug in or out with wet hands.
   d. After use, please unplug the power plug for maintenance or cleaning.
2. **Danger of fire or electric leakage:**
   a. Do not let the washing machine close to the fire source, or put lighted cigarettes, candles and volatile materials on the washing machine.
   b. Please do not spill water directly on the washing machine control panel.
   c. Please don't put the washing machine in the place with serious water and moisture.
   d. Please fix the drain pipe before use, and make sure that the sewer is not blocked.
3. **Risk of burns due to high temperature:**
   a. When washing at high temperature, the door glass will get hot. Please do not touch the door glass, especially children.
   b. When the door needs to be opened in high temperature washing, please wait until the temperature drops to the safe temperature and the door lock is automatically unlocked.
4. **Risk of personal injury:**
   a. Please handle the disassembled package in time. Do not let children touch or swallow it.
   b. Children are not allowed to operate or climb onto the washing machine to play.
   c. Please close the door when the washing machine is not in use to prevent children from entering the washing barrel.
5. **Risk of damage to washing machine:**
   a. Please don't put heavy objects on the washing machine.
   b. Two people are required to move or handle the washing machine.
   c. Please do not let non professionals repair or modify the machine.
6. **Risk of damage to clothing:**
   a. Please do not wash waterproof clothes, such as raincoats, down products, sleeping bags, etc.
   b. Only machine washable clothes can be washed. If in doubt, please follow the washing guide on the clothes.
7. **Risk of explosion:**
   a. Do not wash or dehydrate the clothes stained with kerosene, gasoline, diluent and other flammable materials.
   b. Do not operate the washing machine when the gas leaks.
8. When the power plug is pulled out, the door lock can be opened even if the water level in the barrel is high. Therefore, in any case, please confirm the water level in the barrel before opening the door. If the water level is high, please do not open the door to avoid unnecessary loss caused by water overflow.

COMPONENTS NAMES

Description of accessories

Use manual	Inlet hose	Transport screw hole plug（4pcs）
		

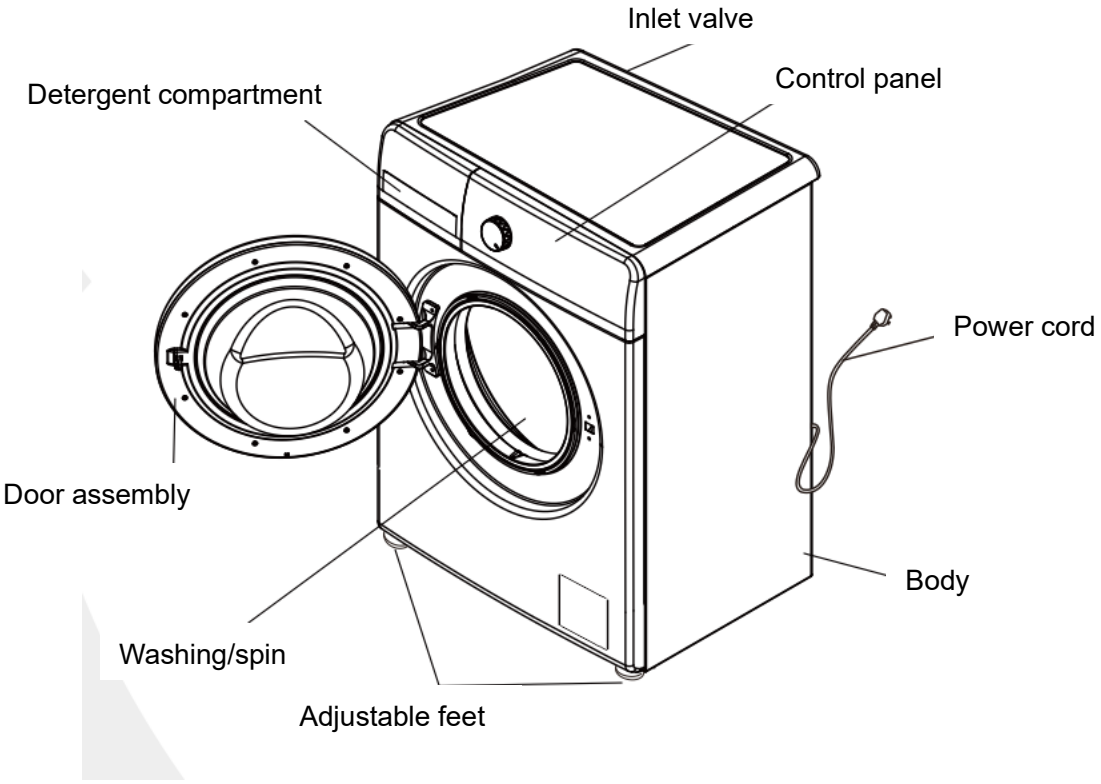

The figure above is only for reference!

Notes:

1. When washing clothes for the first time, some water may flow from the washing machine. This is what is left during the performance test at the factory. This phenomenon is normal.
2. After using, please pull out the power plug, turn off the faucet to prevent unexpected flood and fire.

INSTALLATION INSTRUCTIONS

- The environmental temperature of places to install or place the washing machine shall not be below 0 °C. Do not install or place the washing machine outdoors.
- Follow management practices and regulations to correctly place the washing machine.
- When the washing machine is installed on a floor with a carpet, do not block the ventilation orifice of the base.
- There are many insects in the countryside. Please keep the surroundings of the washing machine clean. The warranty does not cover any damage caused by cockroaches or other insects.

Shipping bolts

The shipping bolts are used to prevent internal damage of the washing machine during transport.

Disassembling the shipping bolts

1. Open the package, remove the packaging base and move the washing machine to the installation place.

2. Disassemble the 4 shipping bolts, rubber pads and plastic rods (see Figure 1). If the shipping bolts are not dissembled, they may cause intense vibrations, noise and faults. The shipping bolts shall be installed every time before the washing machine is transported.

1. Use the supplied plastic plugs to cover the four holes. (see Figure 2).

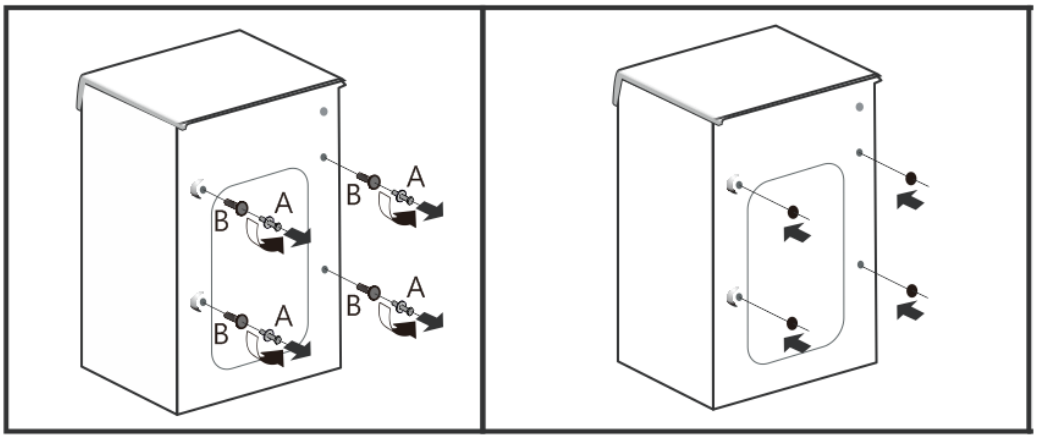

Figure 1

Figure 2

Requirements for installation place

Horizontal adjustment:

- The tilt angle shall not exceed 1 degree. Power outlet:
- Do not connect to a number of power plugs.

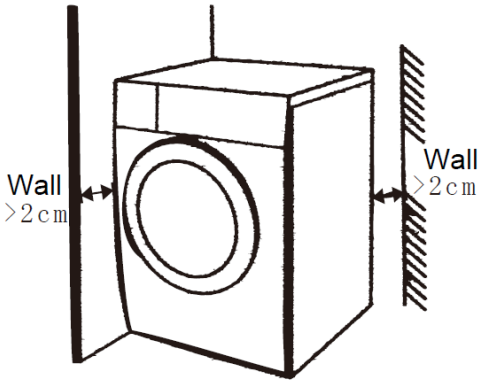

Installation place:

- Allow sufficient safety distance between the washing

Machine and the wall. (distance between the back/left/right of the washing machine and a wall >2cm)

- Install the washing machine at a hard and flat floor with a drain. Do not install it on soft carpeted or wooden floors.
- Do not put clothes to be washed or other objects at the worktop of the washing machine because they will affect the running of programs.

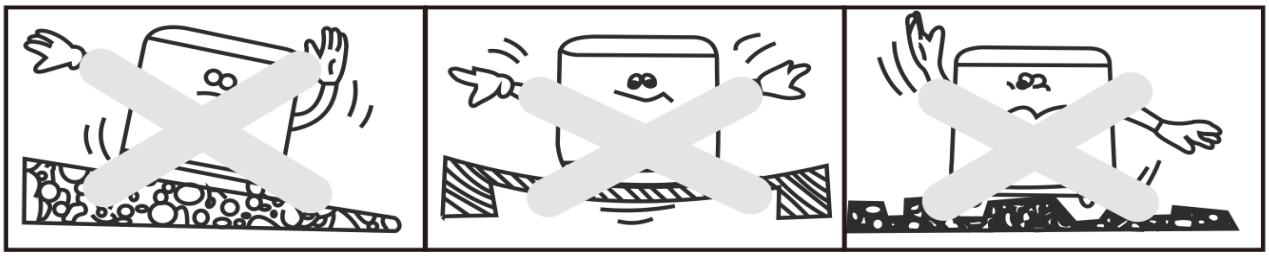

⚠ NOTES

Connecting the power supply

1. Do not use a power strip or power strip bar.

2. If the power cord is damaged, please contact professional persons to repair it to avoid injuries.

3. After using, please unplug the power plug and turn off the faucet.

4. Connect the power cord of the washing machine to a grounded power outlet and follow the wiring rules.

5. The washing machine shall be installed at a place where it can connect to the power outlet easily.

- The washing machine shall be repaired by professional persons. Non-professional persons may damage the washing machine seriously or cause serious faults during repair, please contact the local repair center.
- Do not place the washing machine at a place whose surrounding temperature may be

below 0 °C because water pipes will be frozen and broken and the program controller will be damaged at the temperature below 0 °C.

- If the washing machine is handled in winter at the temperature below 0 °C, please place it at room temperature several hours before using.

Connecting the power supply

- The washing machine must have a grounding device. The grounding device can reduce the danger of electric shocks in case of a failure. This device has a grounding line (a conductor with a grounding plug). The grounding plug must be inserted into an appropriate power outlet.
- Please contact professional persons to test whether or not the washing machine is grounded correctly. If the power outlet and the power plug do not match, please do not change the power plug.
- If the washing machine smokes or emits a peculiar smell, please cut off the power supply and contact professional persons.

To ensure quality, the washing machine is filled with water for testing at the factory, water may remain in the interior of the drum, the door seal and the door glass, and this is a normal condition.

Connecting the water supply hose

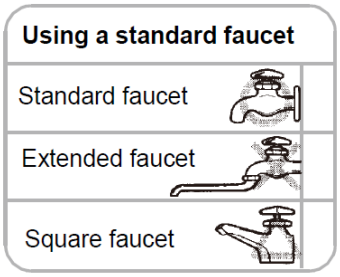

1. The water supply pressure shall be from 30kPa to 850kPa.
2. During connection of the water supply hose and the inlet valve, do not screw them tightly to avoid slipping.
   - There are 2 seal rings in connectors at both ends of the water supply hose to prevent water from leaking.
   - Turn on the faucet to check the connectors for any water leakage.
   - Check the water supply hose regularly and replace it if necessary.
   - Make sure that the water supply hose is not warped or damaged.

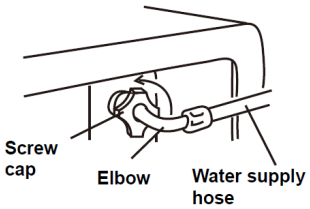

⚠ NOTES

Use the new hose assembly that comes with the washing machine. The old hose assembly cannot be reused.

Connection of water supply hose to faucet

1. Hold the connector with one hand, press the retaining ring with the other hand and pull it down to separate the connector from the water supply hose.

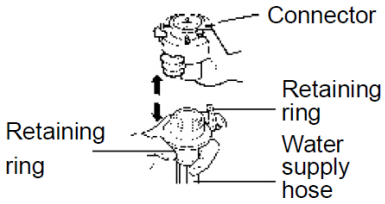

Loosen the four mounting screws on the upper part of the connector, and rotate the lower part of the connector to leave a distance enough (equal to the height of 3 threads) for installing screws between the upper part and the lower part of the connector.

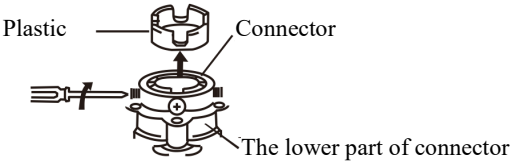

⚠ Plastic conduit the upper part of connector

The lower part of connector

3. Adjust the four screws of the connector evenly so that two screws near the wall are fully in contact with the exterior of the faucet first.

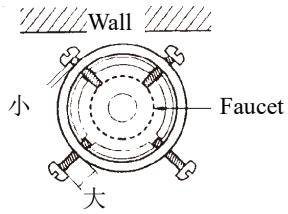

⚠ Screw near the wall can be screwed several threads in advance.

4. Hold the upper part of the connector against the mouth of the faucet so that the seal ring in the connector is fully in contact with the faucet (please do not take out the seal ring).

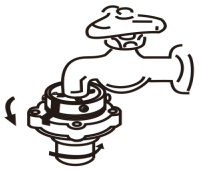

Please choose standard faucet, faucet mouth must be smooth. If it is uneven, file it.

5. Rotate two screws (see figure) opposite to the wall so that they are in contact with the faucet, and screw them with a screwdriver tightly.

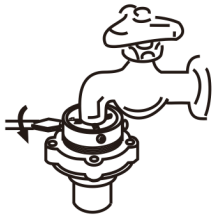

6. Rotate the lower part of the connector to screw it tightly (or else, water may leak from the connection). After rotation, the clearance between the lower part and the upper part of the connector shall be lower than 3mm.

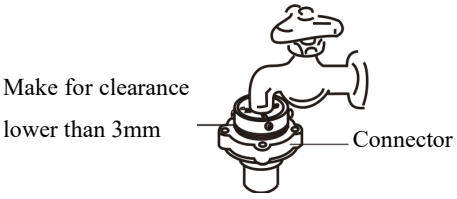

7. To remove the water supply hose, please press the retaining ring of the water supply hose.

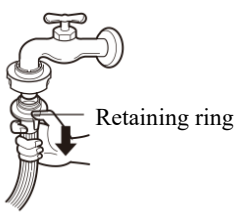

8. To install the water supply hose, please turn the retaining ring of the water supply hose back to release it.

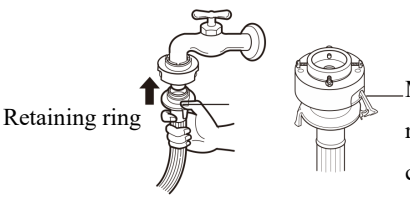

9. Check whether or not the lower part of the connector and the water supply hose are connected firmly.

- Screw the connector of the water supply hose and the inlet valve tightly. Slowly turn on the faucet to check for water leakage.
- If water leaks from the connection, please turn off the faucet and assemble them again. (Water may leak from the connection if the upper part of the connector is not assembled correctly or the upper part and the lower part of the connector are not screwed on tightly.)
- After using for a long time, the connection may be loose. Then, please assemble parts again by following steps 1-9. (If it is necessary to assemble the connector of the water supply hose after a move, please follow steps 1-9 too.)

NOTES:

If a special faucet shown in the figure below is used, please take the following steps to assemble the parts:

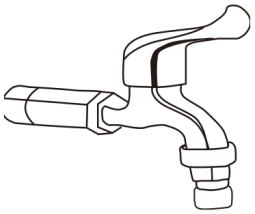	Replace the original connector with the supplied standard connector. 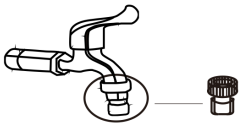 Standard connector	Hold the connector with one hand, press the retaining ring with the other hand and pull it down to separate the connector from the water supply hose. 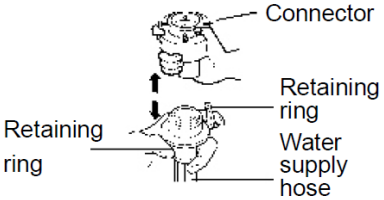	Press both sides of the retaining ring and pull it down to insert the water supply hose into the standard connector directly. 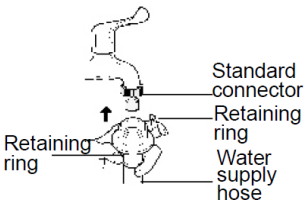

- The washing machine is designed for home use only. Do not use it on ships, travel trucks or airplanes.
- If the washing machine will be not used for a long time (such as vacations), please turn off the faucet.
- When the washing machine is placed, please unplug the power plug, cancel the lock function to

prevent children being trapped inside the washing machine through misuse.

- Packaging materials (such as films and foams) can be dangerous to children, and may cause suffocation! Notes: Keep all packaging material out of the reach of children.

Installing the drain hose

- To ensure normal operations of the washing machine, the inner diameter or width of the end of the drain hose to be inserted into the sewer shall be no less than 4cm.
- The height of the outlet of the drain hose shall be within a certain range. For specific data, please refer to the figure below.

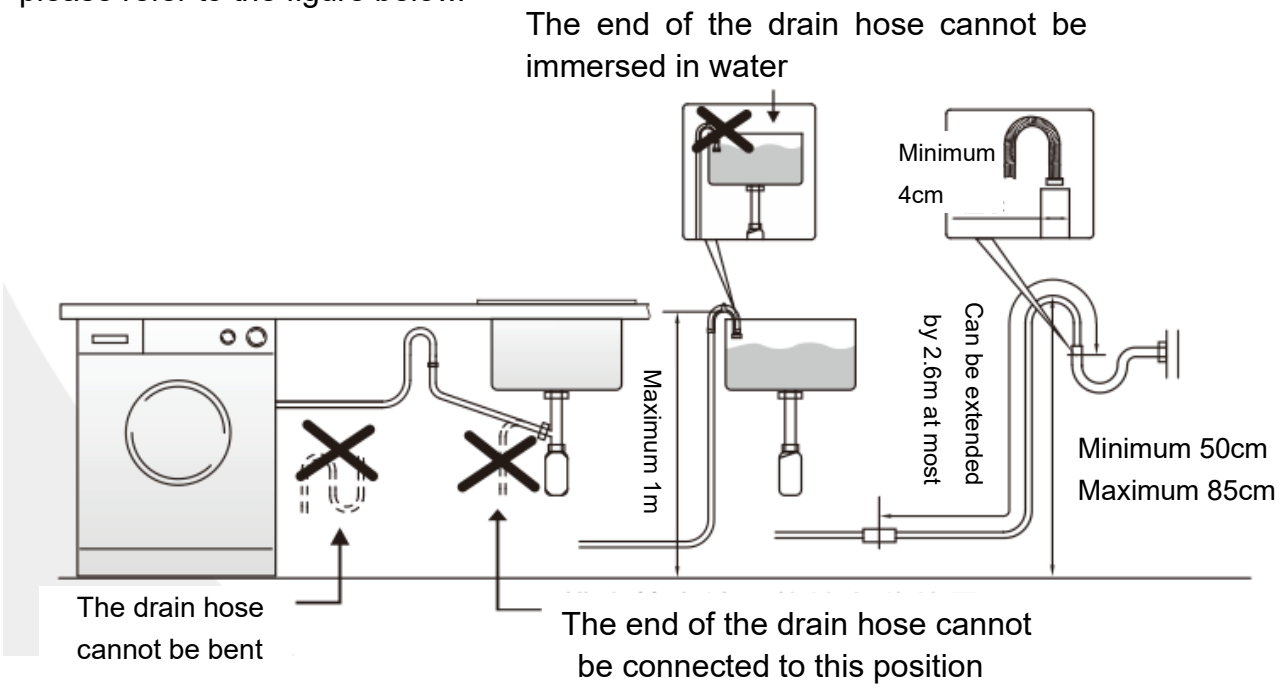

Horizontal adjustment

- Adjust the level of the washing machine to avoid additional noise and vibrations. Install the washing machine on a hard and horizontal floor (the corner of a room is preferred).
- If the floor is not flat, please adjust the adjustable feet. (Do not insert objects such as wood chips under the adjustable feet). Make sure that the four adjustable feet are in contact with the floor firmly and check that the washing machine is horizontal. (Using a spirit level is allowed).
- Adjust the adjustable feet so that the washing machine is flat and stable on the floor. After position adjustment, screw the locknuts tightly to keep the washing machine stable.

Do not place the washing machine on a table on the floor to prevent it from falling accidentally.

- When pressing any position on the diagonals of the worktop of the washing machine, the washing machine cannot shake. (Check on both diagonals. If the washing machine still shakes, please adjust the adjustable feet again.)

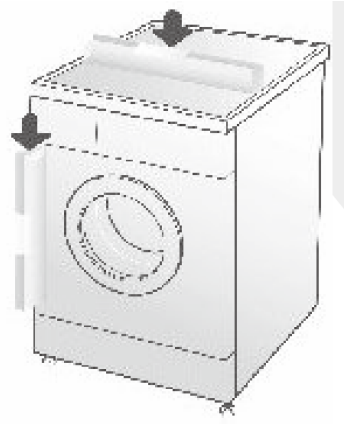

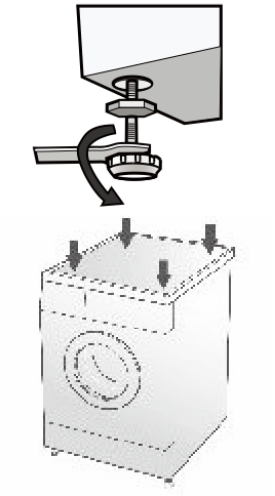

DOOR LOCKING AND UNLOCKING METHODS

Door locking

After startup, the door will be locked automatically and cannot be opened. Then, the “Lock” light/icon on the control panel illuminates.

Door unlocking

- When the “Lock” light/icon on the control panel illuminates, press the “Start/Stop” button. After the washing/spin drum stops rotating, wait for 2 minutes until the door is unlocked automatically.
- Foams may rise from the drum during washing. Please catch them with a towel.
- During washing, the door cannot be opened at high temperature.
- During washing, the door cannot be opened with high water level.

USAGE OF DETERGENT COMPARTMENT

Multi-squared detergent compartment

Liquid detergent—bleach

- Please use synthetic low-foam liquid detergents.
- If concentrated liquid detergents are used, please dilute them with water (2:1) and pour them into the detergent compartment.

Clean the detergent compartment in advance

- If the clothes are very dirty, please add appropriate detergents after selecting the pre-wash function. (The quantity of detergents varies with models)

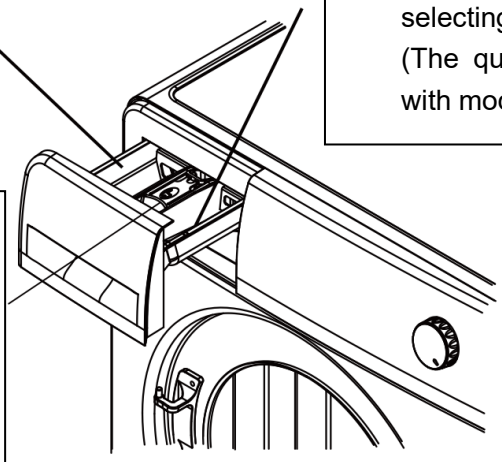

Fabric Softener

- Add softeners before washing. The washing machine will automatically inject softeners into the drum during the final rinse.
- If concentrated softeners are used, please dilute them with water appropriately and evenly and pour them into the detergent compartment.
- Do not exceed the "Max" line.

Single-squared detergent compartment

Liquid detergent—bleach

- Please use synthetic low-foam liquid detergents.
- If concentrated liquid detergents are used, please dilute them with water (2:1) and pour them into the detergent compartment.

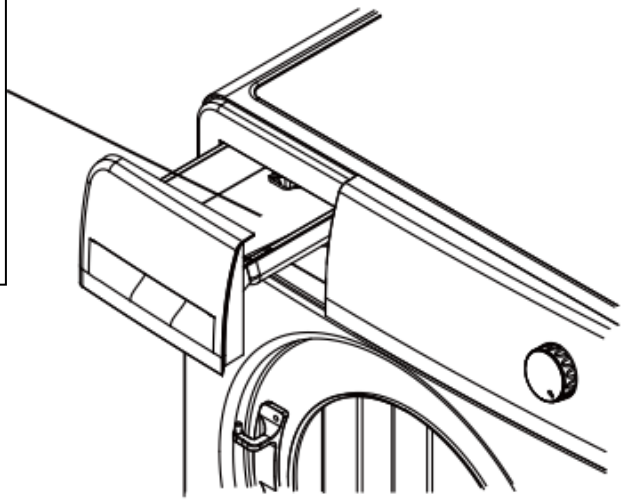

- Use detergents made specially for drum washing machines.
- Do not use too much detergent, or too much foams may affect the rinse effect or cause

functional faults.

- Please follow the instructions of the manufacturer to use detergents by the kinds and colors of clothes, water temperature, degree of staining, etc.
- Using appropriate detergents has good washing effect and is beneficial for environmental protection.

SAFETY PRECAUTIONS BEFORE WASHING

1. Care label

- Read the care labels of clothes. The kind, materials and washing method of a cloth are printed on a care label.

2. Wash by kinds of clothes

- To obtain the best washing effect, only wash one kind of clothes in a washing period.

  Water temperature, spin speed and programs vary with clothes. Dark clothes shall be washed separately from light and white clothes. Dyed clothes and cotton velvet clothes shall be washed separately, or the white clothes may be stained. If possible, do not wash very dirty clothes with moderately dirty clothes.

• Degree of stains (Severe, moderate, minor) • Color (White, light, dark) • Cotton velvet (clothes whose cotton velvets are easy to drop out and clothes easy to adhere to cotton velvets)	• Wash by kinds of clothes and degree of staining • White clothes shall be washed separately from colored clothes. • Clothes whose cotton velvets are easy to drop out and clothes easy to adhere to cotton velvets

		
Check whether or not the clothes are machine-washable	For clothes whose buttons or accessories are easy to be damaged during washing, please wash inside out	Remove dust and silt from clothes before washing

 Take out objects such as keys, hairpins, pins and coins from pockets	 Put delicates into a laundry bag before washing	 Wash clothes with oil stains or clothes that are easy to fade separately

FUNCTIONAL DESCRIPTION OF CONTROL PANEL

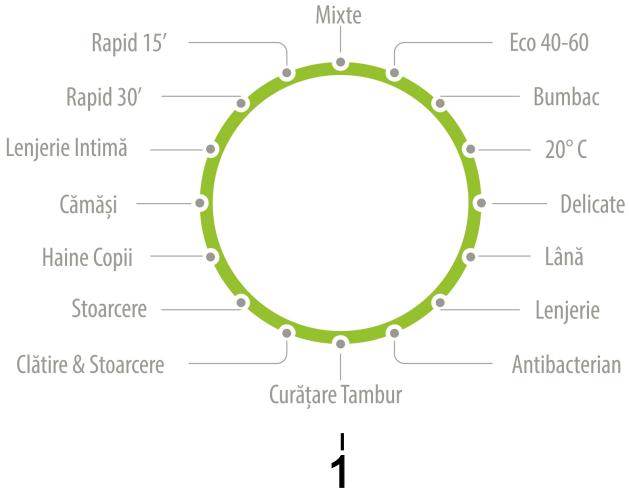

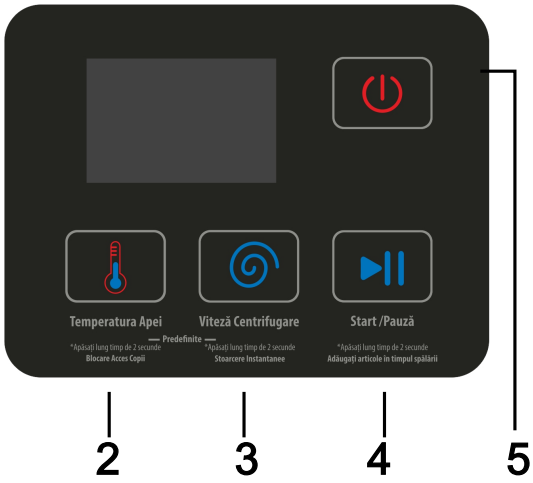

1. **Program selection**
   - Select an appropriate program by kinds of clothes and degree of stains.
2. **“Temp” button**
   - Select the water temperature by the kinds of clothes and degree of staining.
   - The range of water temperature varies with programs. The water temperature is not required for some programs.
   - After the program starts, press for more than 2 seconds to turn on or off the child lock function. After setting the child lock function, except for the "POWER” button, other buttons are invalid.
3. **Dewatering speed button**
   - **Choose Dewatering speed according to the amount of clothing and the type of clothing**
   - **The program is different, the setting range of speed is different.**
   - **After power on, long press this button for 2 seconds before starting the**

machine to enter the "single Dewatering " program.

4. **“Start/Pause” button**
   - Press this button to start working.
   - During operations, press this button to stop a program temporarily, and press it again to restore this program.
   - Press and hold this button for 2 seconds to open the door temporarily for adding clothes during operation.
5. **“Power” button**
   - Press this button to power on and off.
   - After a program is ended, press the “Power” button to power off.
6. **Preset button**
   - **Press "water temperature" + " Dewatering speed" at the same time to enter the reservation function;**
   - **1-24 Each time you press the button, select the restart time within 1 to 24 hours based on the increment of 1 hour each time**

DESCRIPTION OF FUNCTIONAL PROGRAMS

Washing usage of clothes

1. Prepare for washing
   - Open the door, add clothes to the drum, and close the door.
   - Withdraw the detergent compartment, add detergent and fabric softener, and close the detergent compartment.
   - Connect the water supply hose, and make sure that the faucet is turned on.
2. Press the “Power” button to power on.
3. Select a program in the following order with the program knob as needed:

   Mixed---ECO40-60---Cotton--20 ˚C---Gentle---Wool---Night---Antibacterial---

   Drum Clean---Rinse Spin---Spin---Kid Wear---Shirts---Underwear---Quick30’---Quick15’
4. Press the “Start/Pause” button to start washing.
5. After washing is ended:
   - The LED flashes and the washing machine gives a buzzing sound.
   - Open the door to take out the clothes.
   - Unplug the power plug and turn off the faucet.

Usage of customized programs

1. Prepare for washing
   - Open the door, add clothes to the drum, and close the door.
   - Withdraw the detergent compartment, add detergent and fabric softener, and close the

detergent compartment.

- Connect the water supply hose, and make sure that the faucet is turned on.

2. Press the “Power” button to power on.
3. Select a program with the program knob as needed.
4. **Press "water temperature"/" Dewatering speed "/" water temperature + Dewatering speed "to set water temperature and Dewatering speed**
And appointment time.
5. Press the “Start/Pause” button to start washing.
6. After operation is ended, the buzzer sounds.
   - The LED flashes and the washing machine gives a buzzing sound.
   - Open the door to take out the clothes.
   - Unplug the power plug and turn off the faucet.

DESCRIPTION OF WASHING PROGRAMS

Program	Water temperature (℃)	Rinse (times)	Maximum load	Kind of clothes
Mixed	40/20	2	≤4kg	Cotton/Synthetic fabrics
Eco 40-60	/	2	Rated	Dirty Cotton/Synthetic fabrics
Cotton	40/60/85/20	2	Rated	Common cotton fabric
20℃	20	2	≤3kg	Down clothes
Gentle	40/20	2	≤3kg	Cotton/Synthetic fabrics
Wool	20	2	≤3kg	Machine-washable wool fabrics
Night	40/60/20	2	≤4kg	Cotton + linen/ Synthetic fabrics
Antibacterial	85	2	≤4kg	Cotton fabrics needing and mite killing and sterilization
Drum Clean	85	2	/	Cleaning and sterilization of washing machine
Rinse + Spin	/	1	Rated	Cotton/Synthetic fabrics
Spin	/	/	Rated	Cotton/Synthetic fabrics
Kid Wear	60/85/20/40	3	≤4kg	Cotton fabrics needing simple cleaning and odor removal
Shirts	40/20	2	≤4kg	Cotton/Synthetic fabrics
Underwear	40/60/20	2	≤3kg	Cotton/Synthetic fabrics
Quick30'	20	2	≤2kg	Not very dirty clothes/frequently used towels
Quick15'	20	2	≤2kg	Not very dirty clothes/frequently used towels

Notes:

1. The first parameter of water temperature and spin speed is the default parameter at startup. You can select other parameters manually.
2. The washing time required may vary with water pressure, drainage conditions, kinds of clothes and water temperature.
3. When the washing machine starts up after a power failure, it runs from the time node before the power failure.

MAINTENANCE AND SERVICING

- After using for a long time, please service the washing machine immediately.

Good servicing practices may extend the service life of the washing machine.

- Before servicing, please unplug the power plug to avoid dangers from happening.

<table>
<tr>
<td>Body
Please wipe the body with a soft and clean cloth every time after the washing machine is used. When there are serious stains, please wipe the body with a cloth dipped in appropriate detergents or soapy water.
● Do not spray water on the body directly.
● Do not wipe the body with chemicals such as putty-powder, diluting agents, gasoline and alcohol.</td>
<td rowspan="2">Cleaning the detergent compartment
● To prevent detergents becoming moldy on the wall of the detergent compartment, please clean the detergent compartment regularly.
● Press the specified position and pull out the detergent compartment, wash it with water and put it back.
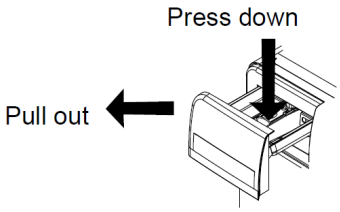
</td>
</tr>
<tr>
<td>Door seal
Please wipe stains and foreign matters such as thread chips away with a towel every time after using. If there are foreign matters such as pins in the groove of the door seal, please take them out.</td>
</tr>
</table>

If the washing machine is frozen

1. Wrap the faucet and the universal coupling with a hot towel.
2. Remove the water supply hose and immerse it in hot water at the temperature of approximately 50℃.
3. Pour 2~3 liters of hot water at the temperature of approximately 50℃ into the drum.
4. Connect the water supply hose again, turn on the faucet, start up the washing machine, and check whether or not the water supply and drainage are normal.

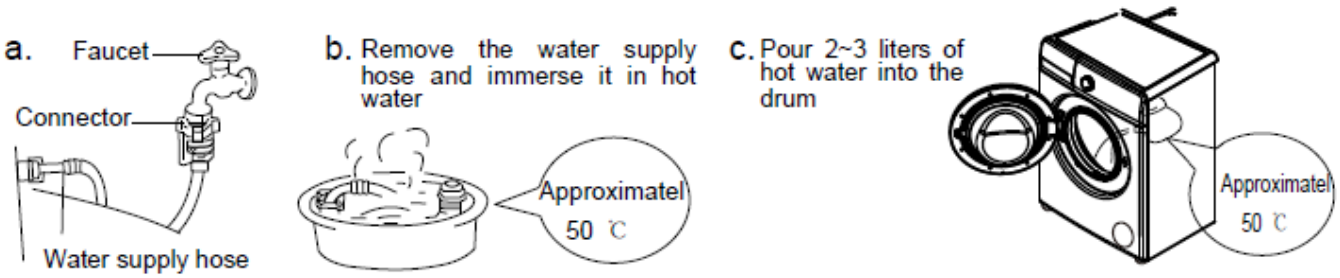

Self-cleaning of drum (once a month is recommended)

After using for a long time, there may be stains in the washing drum. The self-cleaning program can be used to clean the exterior and the interior of the drum.

Notes: During self-cleaning, do not add clothes or detergents.

Cleaning the universal coupling （once every six months is recommended）

1. Remove the water supply hose from the universal coupling.
2. Screw off the fastener by following the arrow.
3. Rinse the interior of the fastener with water.
4. Install the clean fastener and the water supply hose.

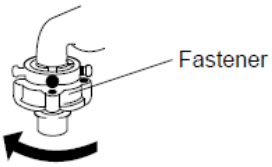

Cleaning the inlet valve (once every six months is recommended)

1. Remove the water supply hose from the washing machine.
2. Take out the filter screen from the inlet valve.
3. Clean the filter screen thoroughly with a toothbrush or similar tools. Install it to the inlet valve.
4. Connect the water supply hose again.

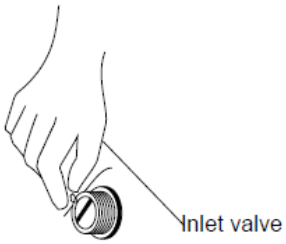

Cleaning the filter of the drainage pump (once a month is recommended)

1. After drainage, disconnect the power plug, press the clip above the decorative cover for the drainage pump at the right corner in the front of the body, and open the filter cover. (Note: if there is hot water in the washing machine, please take the above actions only after cooling.)
2. Screw off the filter anti-clockwise.
3. Rinse the filter thoroughly with water.
4. Insert the filter, screw it clockwise and close the decorative cover for the drainage pump.

Notes:

a. The filter must be tightly screwed to prevent water from leaking.
b. Do not clean the filter when a program is running.

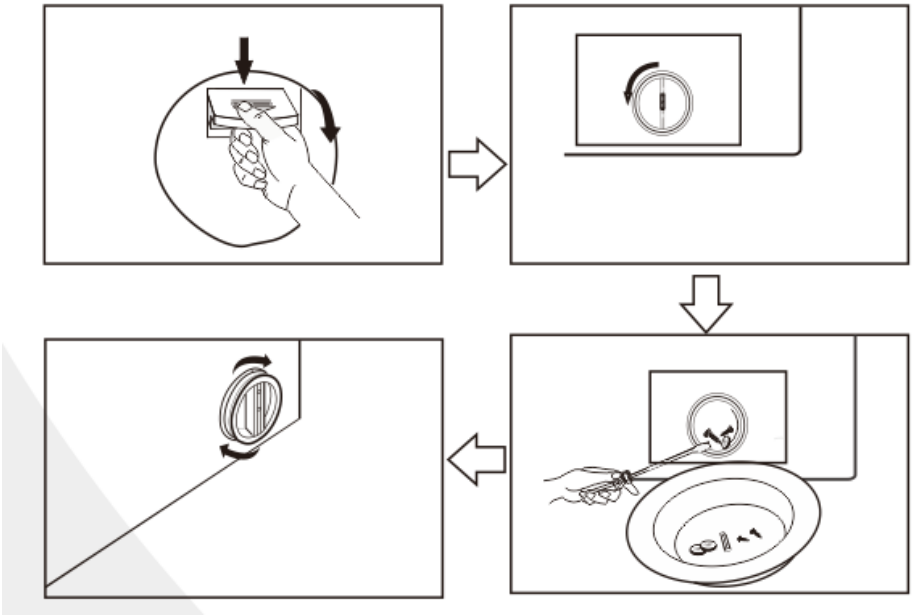

TROUBLESHOOTING GUIDELINES

Symptoms	Check points	Solutions
The washing machine cannot start	● Is the “Power” button or “Start/Stop” button pressed? □ ● Is the plug of the power cord pulled out? ● Is there a power failure? □ ● Is the leakage protector broken?	● Press the “Power” button or “Start/Stop” button. ● Insert the plug of the power cord. ● Please wait. ● Turn on the leakage protector.
Abnormal spin	● Are the shipping bolts disassembled? □ ● Is the washing machine assembled firmly? ● Are there single small clothes in the drum? ● Are the locknuts for the adjustable feet screwed tightly?	● Disassemble the shipping bolts. ● Put the washing machine on a flat and even floor. ● Add several similar clothes. ● Screw locknuts tightly.
Water inlet fault E01	● Is the faucet turned off? □ ● Is there a water outage or is water pressure lower? □ ● Is the water supply hose frozen? □ ● Is the water supply hose or the inlet valve blocked?	● Turn on the faucet. ● Please wait. ● Unfreeze the water supply hose with hot water. ● Take the filter screens out from the water supply hose and the inlet valve and thoroughly clean them.

Drainage fault E03	● Is the height of the drain hose too high? ● Is the drain hose frozen? ● Is the drain hose blocked by foreign matters? ● Is the floor drain blocked by foreign matters?	● Please put the drain hose well and make sure that the height is below 1m. ● Unfreeze the drain hose with hot water. ● Take the foreign matters out and empty the drain hose. ● Remove foreign matters from the floor drain.
Door fault E02	Make sure whether or not the washing machine starts when the door is not closed tightly?	Close the door tightly.
No heating fault E06	Turn off the faucet and disconnect the power plug. Then, contact professional service persons.	
Continuous water inflow fault E04	Turn off the faucet and disconnect the power plug. Then, contact professional service persons.	
Too many foam	Are low-foam detergents special for drum washing machines used?	It is recommended to add the appropriate detergents.

Notes: the following conditions do not represent faults

The door cannot be opened	● A program is running.
Peculiar smell	● Because rubber parts are used in the washing machine, there can be a rubber smell at the beginning.
Low water quantity during washing and rinsing	● Drum washing machines wash clothes with a liter of water.
Water inflow during running of programs	● If the water level decreases, the washing machine automatically replenishes water.
Drainage during washing	● Are too many or high-foam detergents added?
Variation of remaining time	● During spinning, if the clothes are off center, the spin time will increase appropriately to correct this phenomenon. ● If the water pressure is too low, the inflow time will increase appropriately.
Abnormal sound during spinning	● Is the power cord contact with the body? □ ● Are the shipping bolts disassembled? □ ● Are there foreign matters such as hairpins and coins in the drum?

SPECIFICATIONS TABLE

Model	NWM612E-W
Rated washing capacity	6.0kg
Rated spin capacity	6.0kg
Rated voltage	220V-240V 50Hz
Rated washing power	250W
Rated spin power	500W
Rated heating power	1800W
Maximum power	2000W
Washing noise	62dB(A)
Spin noise	75dB(A)
Water pressure	0.05-0.85MPa
Overall dimensions (mm)	598×445×845
Applicable standards	GB4343.1、GB4706.1、GB4706.24、GB19606、GB17625.1、GB12021.4

Conformity with the noise limit specified in GB19606.

NAME AND CONTENT OF HAZARDOUS SUBSTANCES USED IN THIS APPLIANCE

Component names	Hazardous substances					
	Plumbum (Pb)	Hydrargyrum (Hg)	Cadmium (Cd)	Hexavalent chromium Cr (VI)	Polybrominated biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)
Door lock	×	○	○	○	○	○
Computer board	×	○	○	○	○	○
Power cord	○	○	○	○	○	○
Bolt and nuts	○	○	○	○	○	○
Water level sensor	○	○	○	○	○	○
Draining Valve	○	○	○	○	○	○
Motor	×	○	○	○	○	○
Belt, pulley	○	○	○	○	○	○
Door assembly	○	○	○	○	○	○
Top cover assembly	○	○	○	○	○	○
Control panel components	○	○	○	○	○	○
Housing	○	○	○	○	○	○
Inner barrel	○	○	○	○	○	○
Base	○	○	○	○	○	○
Detergent box	○	○	○	○	○	○
Inner and outer washing barrel	○	○	○	○	○	○

Notes:

1. This table is compiled according to SJ/T 11364.
2. ○: It indicates that the contents of this hazardous substance in all homogeneous materials used for this component are below the limit specified in GB/T26572.
3. X: It indicates that the contents of this hazardous substance in at least one homogeneous material used for this component is above the limit specified in GB/T26572.

Parameters

For washing machine

Parameter	Value		Parameter	Value	
Rated capacity (kg)	6,0		Dimensions in cm	Height	84.5
				Width	59.8
				Depth	44.5
EEI_W ([a])	91		Energy efficiency class ([a])	E (c)	
Washing efficiency index ([a])	1.03		Rinsing effectiveness (g/kg) ([a])	5	
Energy consumption in kWh per cycle, based on the eco 40-60 pro-gramme. Actual energy consump-tion will depend on how the appli-ance is used.	0.735		Water consumption in litre per cycle, based on the eco 40-60 programme. Actual water con-sumption will depend on how the appliance is used and on the hardness of the water.	43	
Maximum temperature inside the treated textile ([a]) (°C)	Rated capacity	45	Remaining moisture content ([a]) (%)	58	
	Half	35			
	Quarter	25			
Spin speed ([a]) (rpm)	Rated capacity	1200	Spin-drying efficiency class ([a])	C (c)	
	Half	1200			
	Quarter	1200			
Programme duration ([a]) (h:min)	Rated capacity	3:18	Type	free-standing	
	Half	2:30			
	Quarter	2:30			
Airborne acoustical noise emissions in the spinning phase ([a]) (dB(A) re 1 pW)	75		Airborne acoustical noise emis-sion class ([a]) (spinning phase)	B (c)	
Off-mode (W)	0.45		Standby mode (W)	0.49	
Delay start (W) (if applicable)	—		Networked standby (W) (if applicable	—	
Minimum duration of the guarantee offered by the supplier ([b]):			—		
This product has been designed to release silver ions during the washing cycle			No		
Additional information:			—		

([a]) for the eco 40-60 programme.
([b]) changes to these items shall not be considered relevant for the purposes of paragraph 4 of Article 4 of Regulation (EU) 2017/1369.
([c]) if the product database automatically generates the definitive content of this cell the supplier shall not enter these data.

Parameters

PARAMETER	UNIT	VALUE
Rated capacity for the Eco 40-60 programme, at 0.5 kg intervals	kg	6.0
Energy consumption of the Eco 40-60 programme at rated capacity	kWh/cycle	1. 06
Energy consumption of the Eco 40-60 programme at half rated capacity	kWh/cycle	0. 6
Energy consumption of the Eco 40-60 programme at quarter rated capacity	kWh/cycle	0. 3
Weighted energy consumption of the Eco 40-60 programme	kWh/cycle	0. 735
Standard energy consumption of the Eco 40-60 programme	kWh/cycle	74
Energy Eficiency Index	-	E
Water consumption of the Eco 40-60 programme at rated capacity	L/cycle	52
Water consumption of the Eco 40-60 programme at half rated capacity	L/cycle	38
Water consumption of the Eco 40-60 programme at quarter rated capacity	L/cycle	32
Weighted water consumption	L/cycle	43
Washing efficiency index of the Eco 40-60 programme at rated capacity	-	1. 03
Washing efficiency index of the Eco 40-60 programme at half rated capacity	-	1. 03
Washing efficiency index of the Eco 40-60 programme at quarter rated capacity	-	1. 03
Rinsing effectiveness of the Eco 40-60 programme at rated capacity	g/kg	5
Rinsing effectiveness of the Eco 40-60 programme at half rated capacity	g/kg	5
Rinsing effectiveness of the Eco 40-60 programme at quarter rated capacity	g/kg	5
Programme duration of the Eco 40-60 programme at rated capacity	h/min	3:18
Programme duration of the Eco 40-60 programme at half rated capacity	h/min	2:30
Programme duration of the Eco 40-60 programme at quarter rated capacity	h/min	2:30
Temperature reached for minimum 5 min inside the load during Eco 40-60 programme at rated capacity	℃	45
Temperature reached for minimum 5 min inside the load during Eco 40-60 programme at half rated capacity	℃	35
Temperature reached for minimum 5 min inside the load during Eco 40-60 programme at quarter rated capacity	℃	25

Parameters

PARAMETER	UNIT	VALUE
Spin speed in the spinning phase of the Eco 40-60 programme at rated capacity	rpm	1200
Spin speed in the spinning phase of the Eco 40-60 programme at half rated capacity	rpm	1200
Spin speed in the spinning phase of the Eco 40-60 programme at quarter rated capacity	rpm	1200
Remaining moisture content for the Eco 40-60 programme at rated capacity	%	55
Remaining moisture content for the Eco 40-60 programme at half rated capacity	%	60
Remaining moisture content for the Eco 40-60 programme at quarter rated capacity	%	60
Weighted remaining moisture content	%	58
Airborne acousitcal noise emissions during Eco 40-60 programme(spinning phase)	dB(A) re 1 pW	75
Power consumption in 'off mode'	W	0.45
Power consumption in 'standby mode'	W	0.49
Does 'standby mode'include the display of information?	—	NO
Power consumption in 'standby mode' in condition of network standby (if applicable)	W	—
Power consumption in 'delay start'(if applicable)	W	—

Rated voltage	220-240V~,50Hz
Rated washing power	250 W
Rated spin power	500W
Rated heating power	1800W
Maximum power	2000W
Water Pressure	0.05-0.85Mpa
Overall dimensions (mm)	598*445*845

The Eco 40-60 program is able to clean normally soiled cotton laundry declared to be washable at 40℃ or 60℃, together in the same cycle, and that this program is used to assess the compliance with the EU Eco design legislation.

Correct disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection system or contact the retailer where the product was purchased. They can take this product for environment safe recycling.